



Waterquard 7 Assemblies
038270-001 WTG 7 ASSY, STD WHITE
038270-002 WTG 7 ASSY, BRIGHT WHITE
038270-003 WTG 7 ASSY, BLACK

## Installing the Waterguard 7 Into a Cooler

Remove the Funnel from the assembled Waterguard 7 by turning it counter-clock wise.

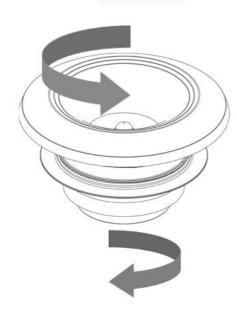

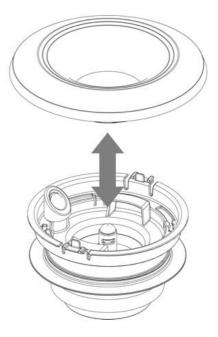


181210 OAS0056A 1



## WaterGuard VII.




### Assembling into a Cooler with a SS Reservoir

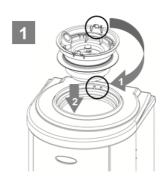

# Insert the WG7 Assembly without the Funnel attached into the Reservoir

- Align the snap fingers on the Retainer to the receiving holes on the Reservoir
- 2. Press into place

Snap fingers

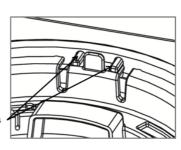




Snaps on underside of Funnel

#### Install the Funnel

- Align the snaps on the underside of the Funnel with the receiving holes on the Retainer.
- Spin the Funnel Clockwise to lock into place.

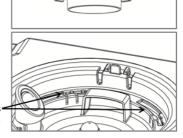

Receiving holes in Retainer.


#### Assembling into a Cooler with a Removable Reservoir



# Insert the WG7 Assembly without the Funnel attached into the Reservoir

- Align the snap fingers on the Retainer to the receiving holes on the Reservoir
- 2. Press into place


Snap fingers

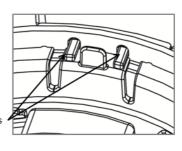



#### Install the Funnel

- Align the snaps on the underside of the Funnel with the receiving holes on the Retainer.
- 2. Spin the Funnel Clockwise to lock into place.

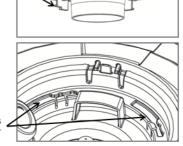

Receiving holes in Retainer

Snaps on underside of Funnel


181210 OAS0056A 2








#### Assembling Probe Cup

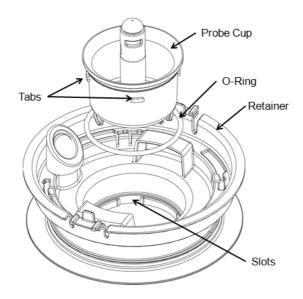

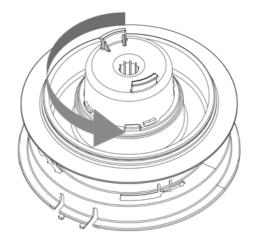


Assemble Probe Cup and O-Ring into the Retainer. Align tabs on Probe Cup with slots on the Retainer and press into place.

Spin the Probe Cup counter-clockwise until it is stopped by the tab on the Retainer


#### Servicing the Waterguard 7

#### Replacing the Probe Seal

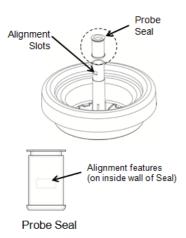


- Remove the Probe Seal from the Floating Probe Tube.
- Place a new Seal onto the Floating Probe Tube oriented as shown with the alignment details on the Seal and Tube together.

#### Replacing the Air Filter

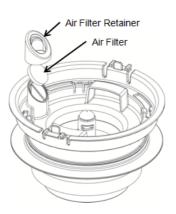

- 1. Remove the Funnel.
- Remove the Air Filter Retainer from the filter holder.
- 3. Remove the Air Filter.
- Install new Air Filter onto the Air Filter Retainer
- 5. Press the Retainer/Filter onto the filter holder

# Assembling the Waterguard

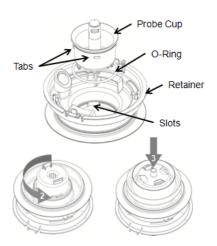

- Assemble Probe Cup and O-Ring into Retainer. Align tabs on Probe Cup with slots on Retainer and press into place.
- Spin the Probe Cup Counterclockwise until it is stopped by the tab on the Retainer
- Insert Floating Probe/Seal assembly into the Probe Cup and snap into place.

181210 OAS0056A 3