




Cooler to Bottle Filler Conversion Kit for Single and Split Level ELKAY EZ8 and LZ8 Water Coolers

INSTALLATION INSTRUCTIONS

OASIS

What's Included:

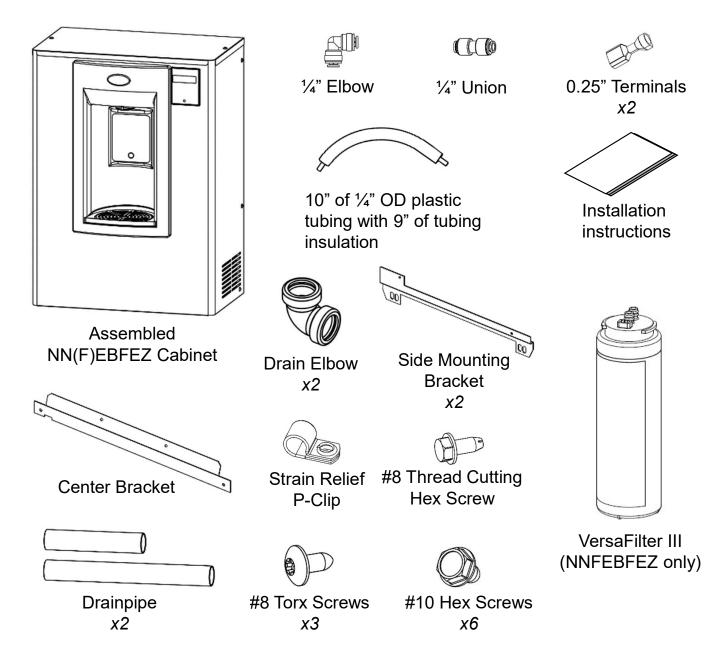


Tools & Hardware Required:

- Electric drill/driver
- Small tubing cutter for plastic line
- 5/16" nut driver
- 1/4" nut driver

- Means to cut 1 1/4" drain pipe
- T15 Torx screwdriver or bit
- T20 Torx screwdriver or bit
- 4 appropriate wall anchors (not supplied)

Section 2: Rough In Drawing

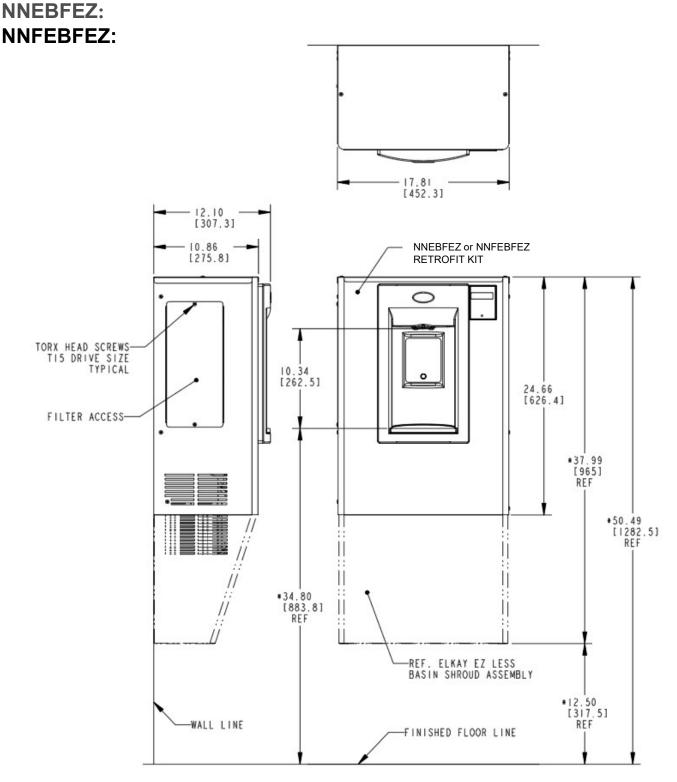

NOTES:

1. * DIMENSIONS ARE REFERENCE ONLY.

2. ALL DIMENSIONS ARE IN INCHES. DIMENSTIONS IN BRACKETS [] ARE MILLIMETERS.



SINGLE LEVEL PREPARATION


- Disassembly of ELKAY Cooler
- Wiring
- Water Lines

Section 3: Preparation


1. Remove fountain wrapper.

2. Turn OFF water supply to the unit. Bleed any remaining pressure from the lines by activating the bubbler valve.

3. Disconnect power by <u>UNPLUGGING</u> the unit from the wall socket.

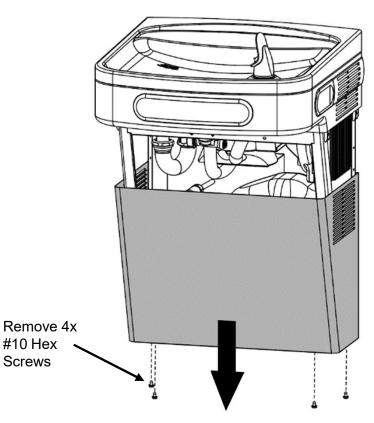


4. Loosen or remove the P-trap so that the fountain nose assembly may be freely removed in the next step.

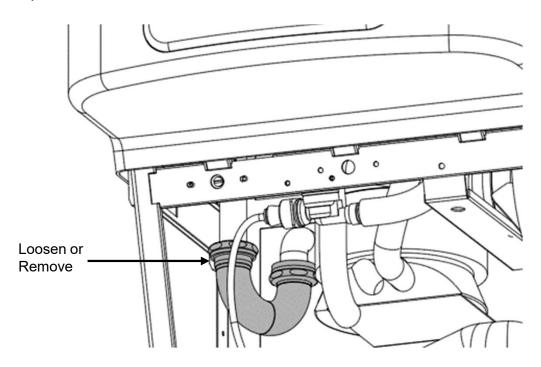

- 5. Remove fountain nose assembly. Tool Needed: T20 Torx bit
 - A. Remove 4x #10 Torx screws from the fountain.
 - B. Disconnect ONLY the nose assembly wires from the cold control and solenoid valve. Leave all other wires connected to the cold control and solenoid valve. For nonrefrigerated models, unplug the unit.
 - C. Disconnect the water line from the bubbler inside the nose. DO NOT disconnect from the fountain.


DO NOT REMOVE COLD CONTROL OR SOLENOID VALVE ASSEMBLIES FROM THE FOUNTAIN.

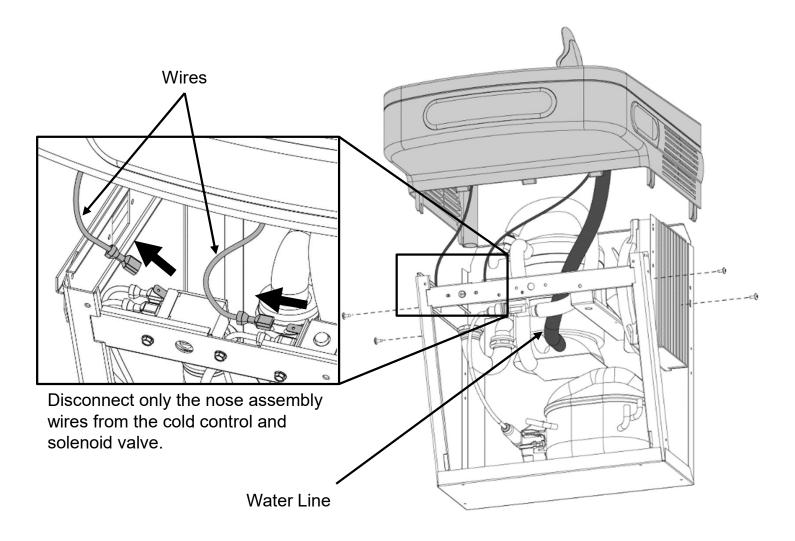

Section 3A: Preparation

6. After the nose assembly has been removed, cover the two bare terminals with the insulated female spade terminals (provided) for safety.


NOTE: The image shown may differ from some models but the instructions will still apply.

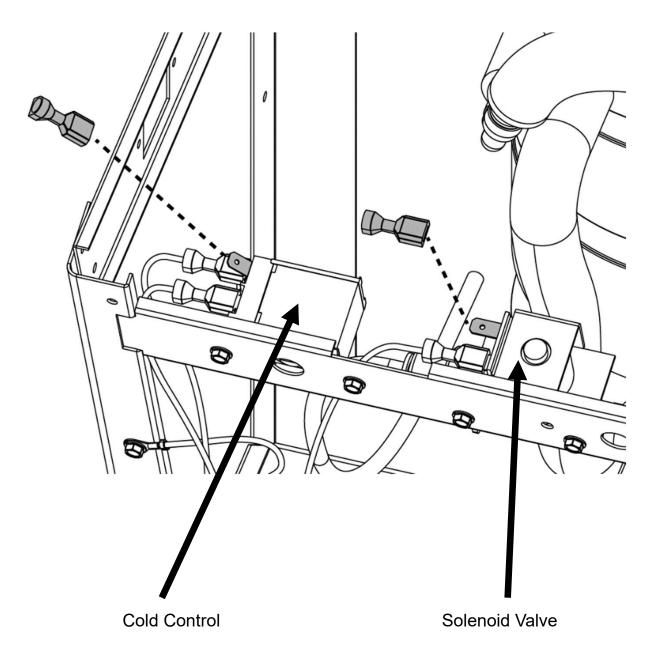

Section 3A: Preparation

Locate the solenoid valve on the Elkay unit. Disconnect both water lines from the solenoid valve. Join the two water lines together using a ¼" elbow fitting (provided) (Fig. 7A). For filtered model NNFEBFEZ with the VersaFilter III skip to next page, <u>Section 3A:</u> <u>Step 8</u>.

Allow the cooling tank water outlet line to extend freely upward (Fig. 7B).

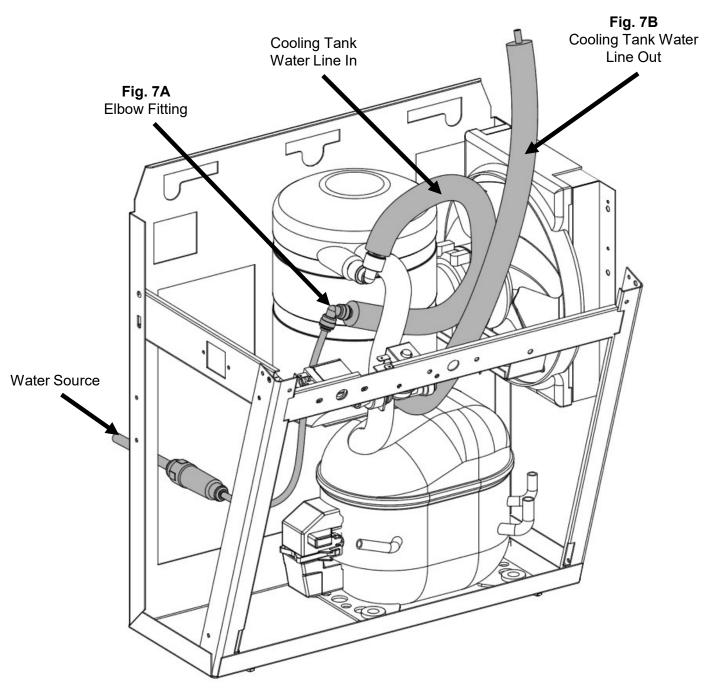


Shown above is the correct final orientation

Section 3A: Preparation

8. Model NNFEBFEZ with VersaFilter III: Locate the solenoid valve on the Elkay unit. Disconnect both water lines from the solenoid valve. Add 1/4" elbow fitting (provided) (Fig. 8A) to Cooling Tank Water Line In. Remove 1/4"OD water source line.

Allow the cooling tank water outlet line to extend freely upward (Fig. 8B).

In future steps after the NNFEBFEZ frame assembly is installed, the Inlet Line on the VersaFilter III head assembly will be connected to the Water Source Fitting (Fig. 8C) and the Outlet Line on the head assembly will be connected to the Cooling Tank Water Inlet Elbow Fitting (Fig. 8A).

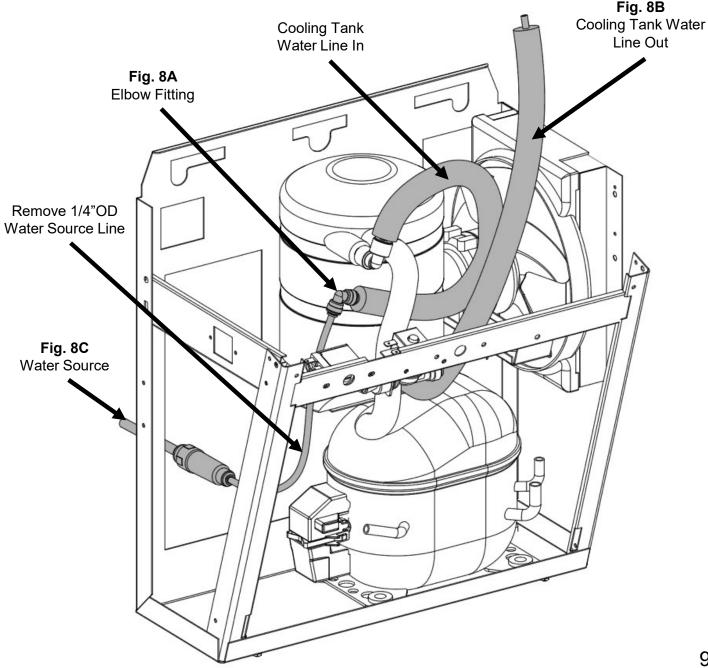


Shown above is the correct final orientation

SINGLE LEVEL INSTALLATION


- Assembly of NNEBFEZ & NNFEBFEZ Cabinet
- Wiring
- Plumbing

1. The NNEBFEZ and the NNFEBFEZ come partially assembled for shipping. Remove the kit from the packaging and separate it into the assemblies and components shown below. **Be sure not to misplace the provided mounting screws and insulated terminals.**


Tool Needed: T15 Torx bit

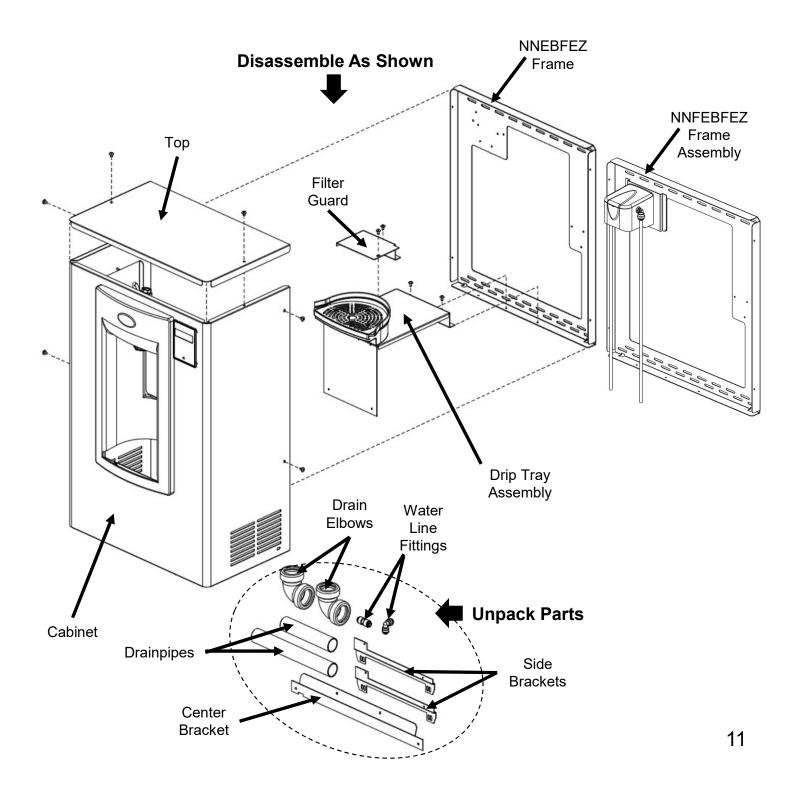


2. Without taking the cooler off the wall, place the retrofit frame against the wall and set it onto the top flange of the cooler frame.

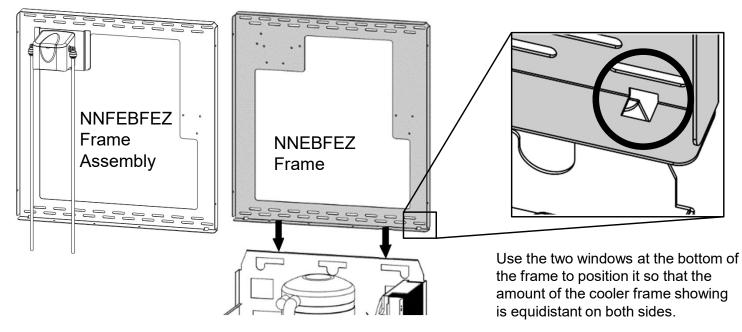


3. Affix the frame to the wall with at least 4 anchors into any appropriate anchor points through the staggered slotted holes. **Be careful to ensure the frame stays centered on the cooler frame.**

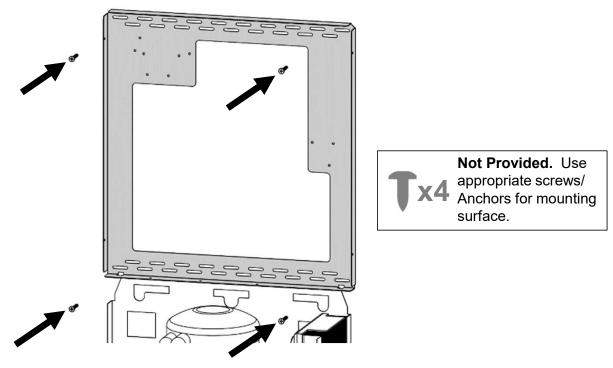


4. Assemble the center bracket to the holes in each of the cooler struts.

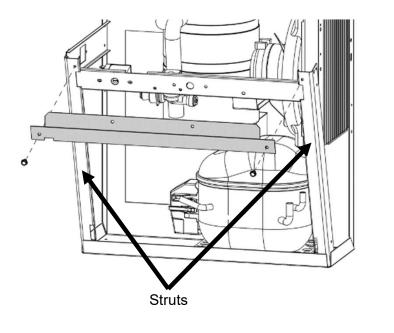

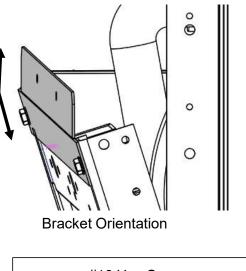


- **Tx2** #10 Hex Screws - or -#10, T20 Torx Screws (original to fountain unit)
- 5. Assemble the two side brackets to the cooler frame using the slotted holes on the bottom with two #10 screws for each bracket. Ensure that the brackets are oriented as shown below.

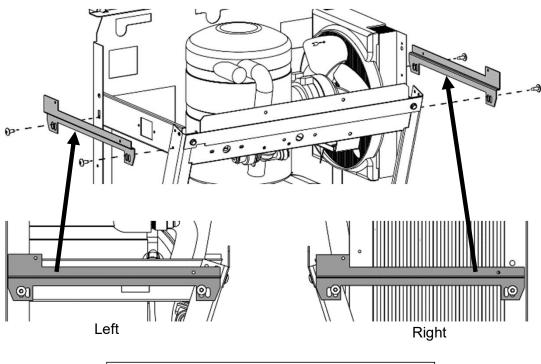


#10 Hex Screws (each bracket)
- or #10, T20 Torx Screws (each bracket)
(original to fountain unit)


6. Install the drip tray support bracket (keep drip tray pre-assembled) to the center bracket and frame using 4x, #8 Torx screws which are provided in the kit.

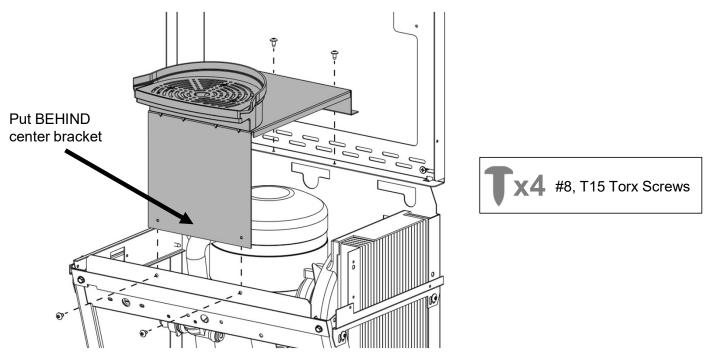

7. Attach the filter guard bracket with 2x, #8 Torx screws to the frame and drip tray support bracket. This bracket helps to prevent the filter cartridge from falling into the cooler unit below during installation or replacement.

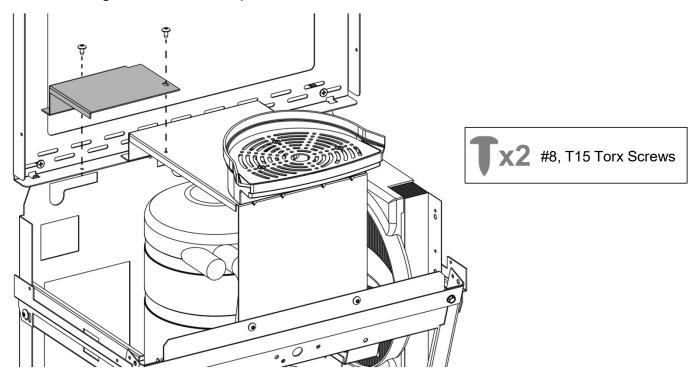


8. Model NNFEBFEZ with VersaFilter III: Insert Filter Head Inlet Line into water source (Fig. 8A). Install VersaFilter III Filter Cartridge to Filter Head Assembly. See instructions on filter cartridge for Installation Instructions and for Filter Flushing Instructions. Direct Filter Head Outlet Tube to a container to collect water for flushing the filter. Turn on water. Flush till water is clear. When flushing is complete, turn off the water and insert Filter Head Outlet Tube into elbow fitting (provided) (Fig. 8B).

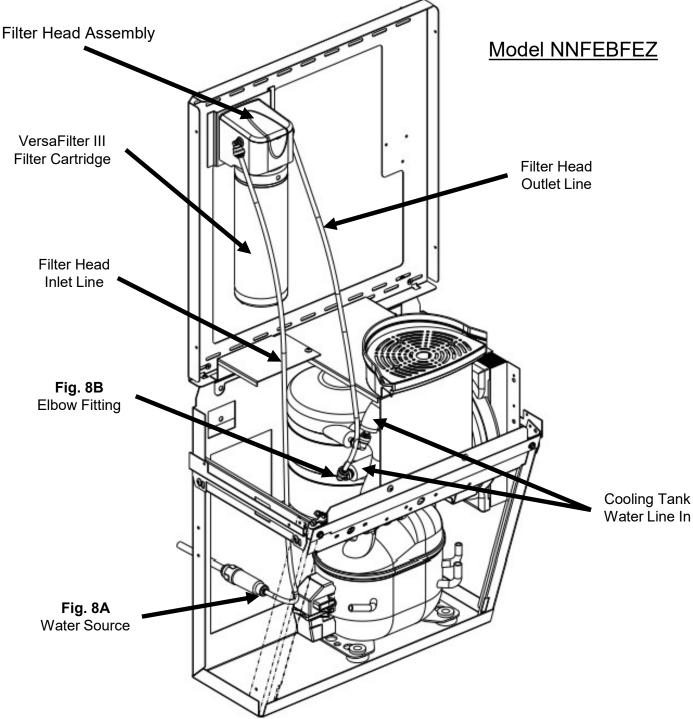


9. Attach one of the drain elbows to the drip tray stem. Insert the drainpipe provided into the elbow and then attach another elbow onto the pipe. Use the remaining drainpipe and connect the drip tray drainage system to the installed P-trap.

NOTE: Drainpipes will need to be positioned and cut to length as needed.

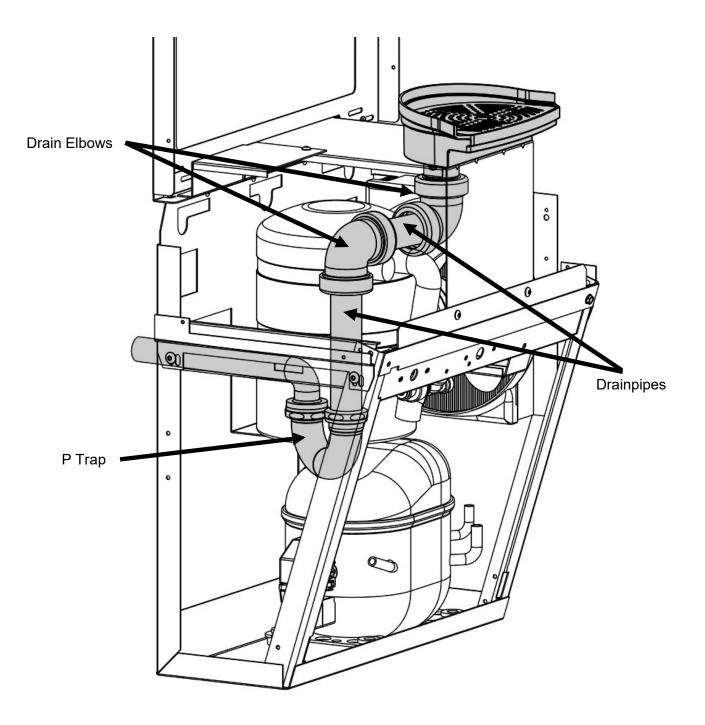


10. Assemble NNEBFEZ or NNFEBFEZ wrapper to the installed frame. Rest the alcove on the drip tray and ensure the wrapper walls rest OUTSIDE of the frame and side brackets.


NOTE: The drip tray will hold the weight of the wrapper but it is recommended to keep a hold on the unit during installation for safety.

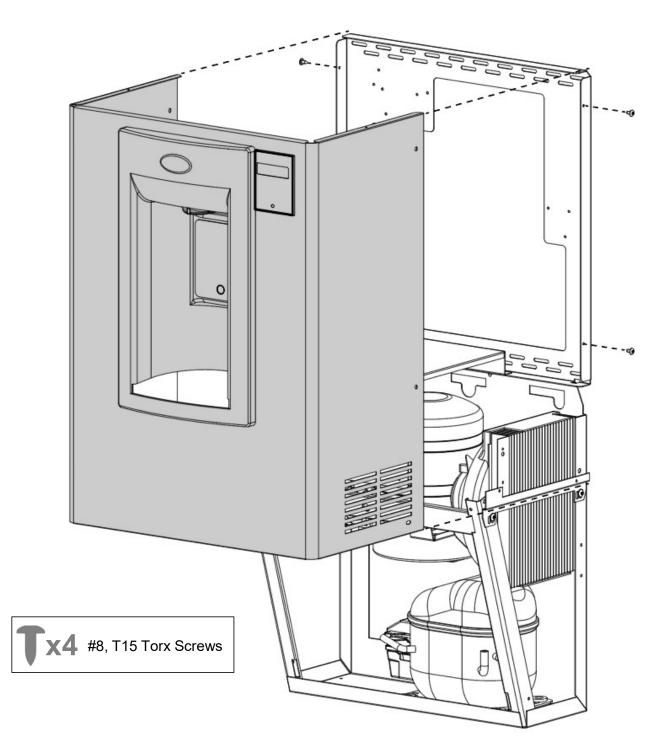


11. If the outer edge of the drip tray is not properly aligned, loosen the screws on the back of the drip tray support bracket and slide the bracket forward or backward as needed. Then retighten the screws.

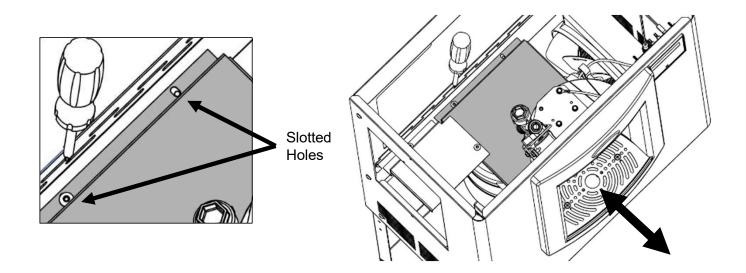


12. Once the wrapper has been installed, loosen the side bracket mounting screws until the bracket can be slid up and down. Adjust the bracket until the mounting hole screws through the slot and then drive in one of the #8 Torx screws and then tighten the two #10 mounting screws.

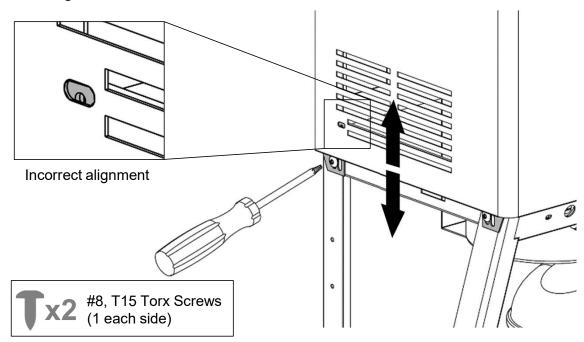


- 13. Attach the ¼" union fitting to the Cooling Tank water line out (Fig 12A).
- 14. Attach one end of the provided ¼" water line with insulation tubing to the solenoid valve located on the alcove, and the other end to the ¼" union fitting. Cut provided water line and insulation tubing as needed.

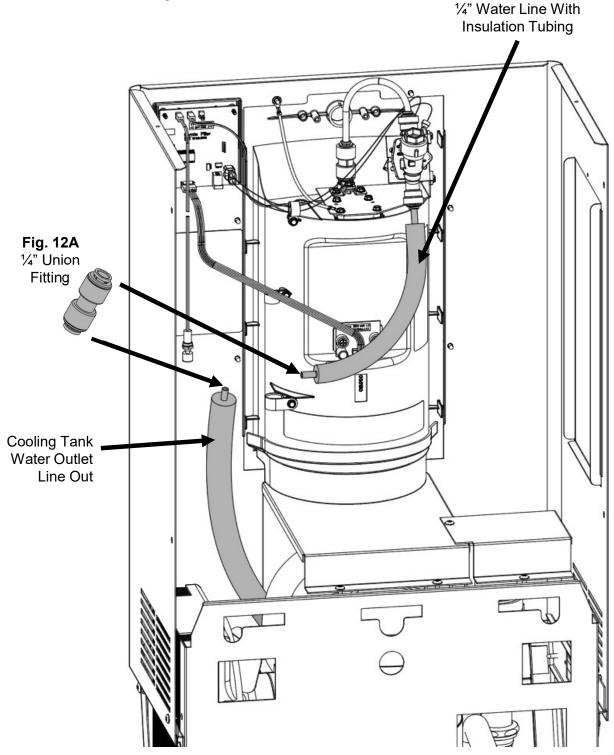


15. Guide the power cord down to the lower portion of the cooler. Ensure that the power cord does not become entangled with other components and ensure that the IEC connector is firmly installed into the power brick.

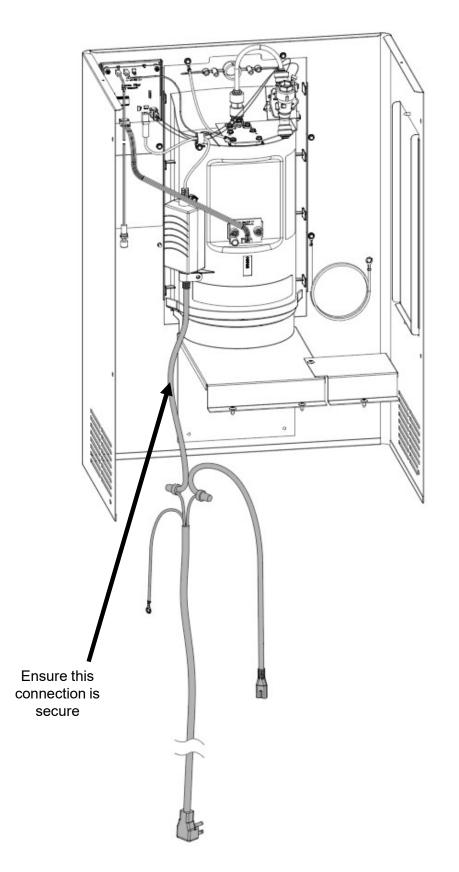


- 16. Install the provided strain relief P-Clip to the power cord roughly 36" from the grounded plug. Attach it to the back side flange of the fountain frame with a #8 Torx screw. (Figure 14a)
- 17. Attach the ring terminal to the ground screw on the left side of the fountain strut through the lower flared hole using the provided #8 thread cutting hex Screw. (Fig 15a). Do not remove/alter the original ground.
- 18. Finish by plugging in the grounded plug into the duplex socket.

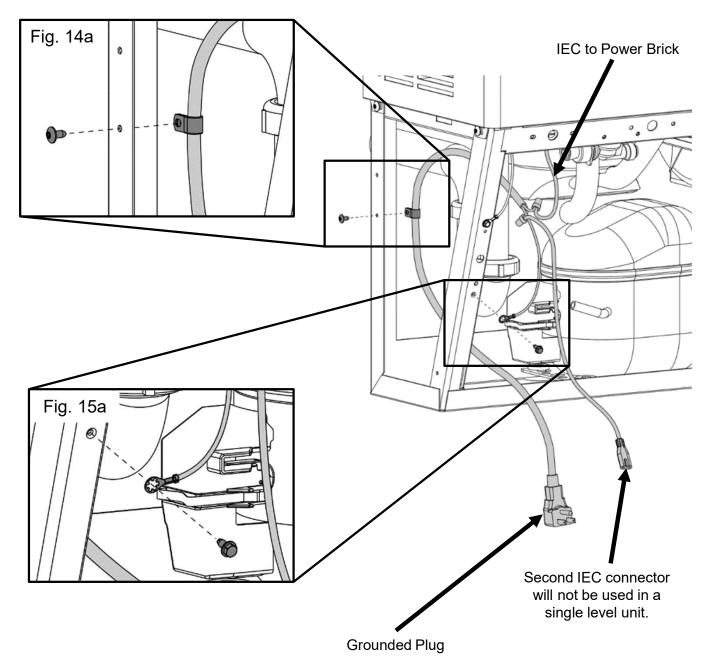

- 18. Turn on water supply and check for any leaks.
- 19. Ensure that nothing is obstructing the fan blade.
- 20. Plug the Elkay power cord into the wall outlet.
- 21. Test the contactless bottle filler by placing a water bottle into the alcove of the bottle filler. Check for leaks.
- 22. Install the cabinet top panel, filter access panel and Elkay cooler wrapper.
- 23. The NNEBEFEZ and NNFEBFEZ comes pre-programmed from the factory. For programming options, please refer to **page 35.**

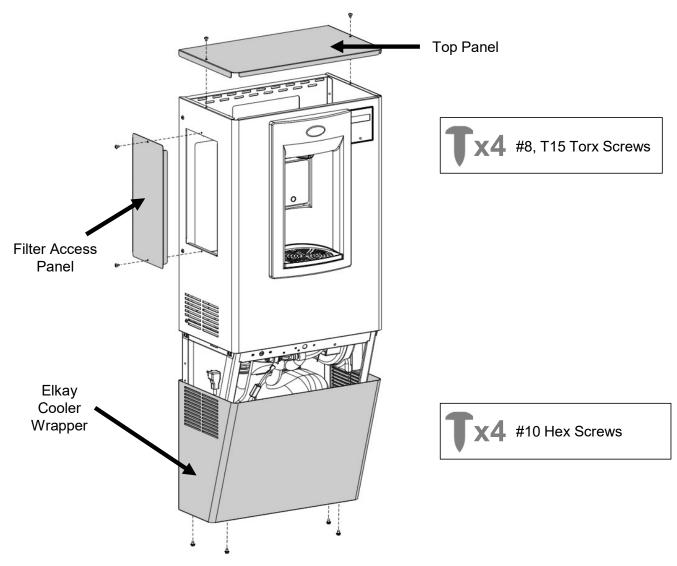

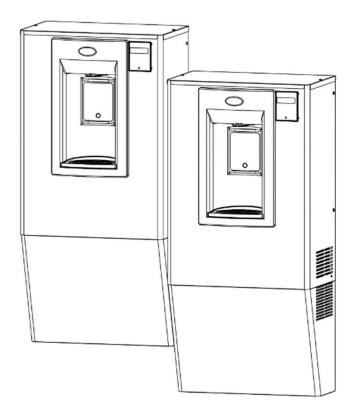


SPLIT LEVEL INSTALLATION

- Assembly of Split Level NNEBFEZ and NNFEBFEZ Cabinet
- Wiring
- Plumbing

NN(F)EBFEZ Split Level: Left Side or Right Side High

REQUIRES 2X NNEBFEZ UNITS or 1X NNEBFEZ and 1X NNFEBFEZ

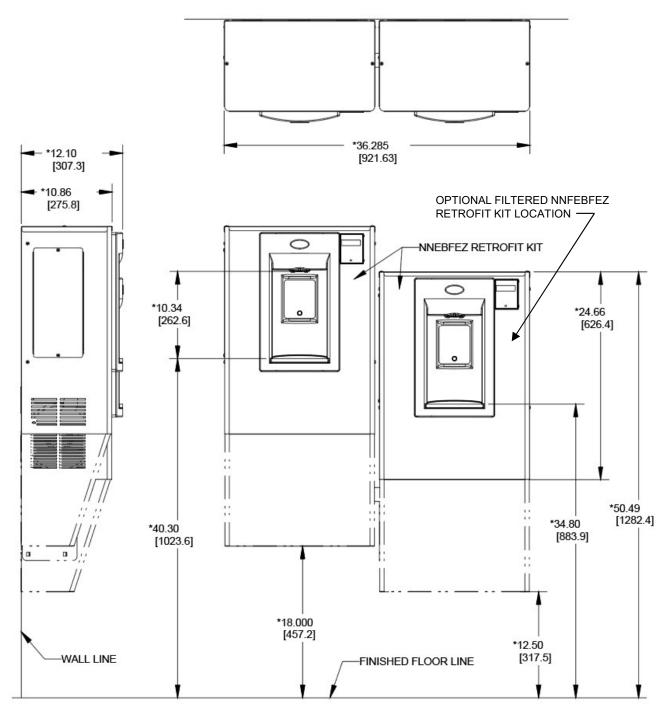

NOTES:

1. * DIMENSIONS ARE REFERENCE ONLY.


2. ALL DIMENSIONS ARE IN INCHES. DIMENSIONS IN BRACKETS [] ARE IN MILLIMETERS.

Section 6: Split Level Preparation

1. Remove the fountain wrappers and noses from each unit as shown on **pages 5-6** to prepare the units for the NNEBFEZ installation. Unplug BOTH units and shut off their water source.

Cover any bare terminals. Refer to page 7.


- 2. Begin split level assembly by disconnecting and removing any drainpipes except for the p-trap and disconnecting the water lines between the fountain units. **Ensure water to the units has been turned off.**
- 3. Since the split level fountain cold tank is already pressurized, disconnect all water lines from the solenoid valves in both the refrigerated and dummy unit. Do not discard any water tubing.

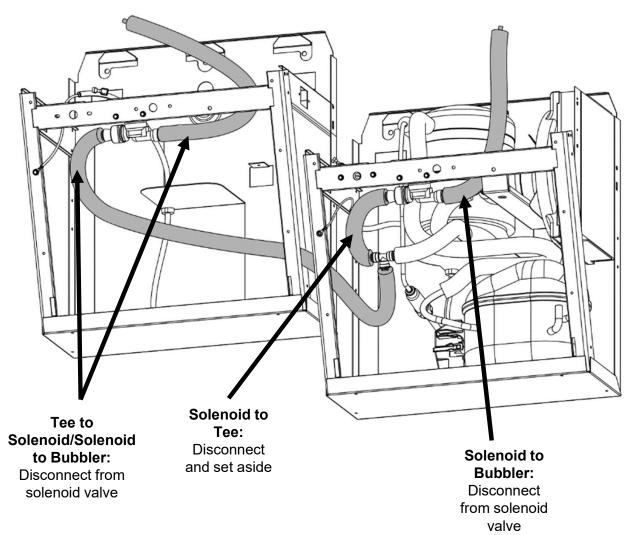

ORIGINAL CONFIGURATION

Section 6: Split Level Preparation


4. The final result should have the water line from the cold tank water outlet connect to the tee and split off to the dummy unit and up to the top of the refrigerated unit.

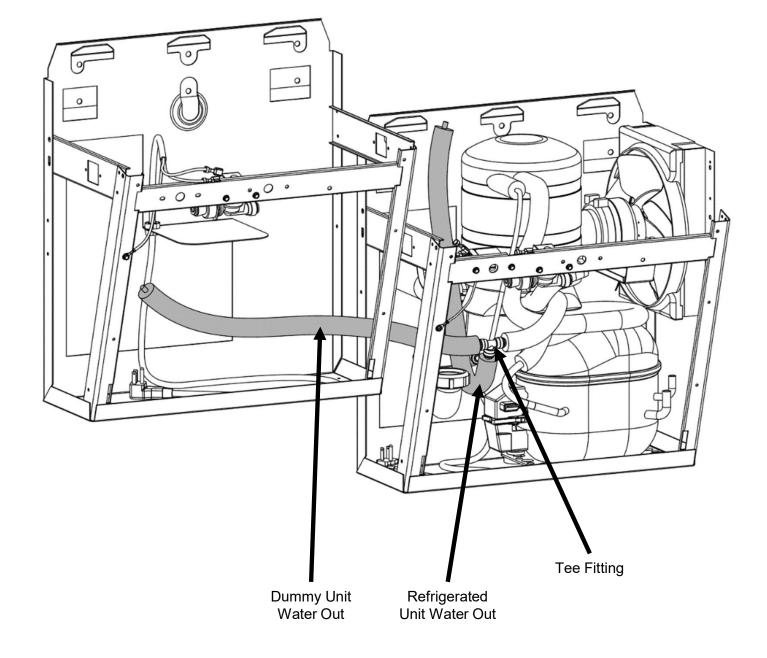

NNEBFEZ CONFIGURATION

Section 6: Split Level Preparation


5. Set the frame from the second NNEBFEZ kit onto the top of the dummy unit frame and mark the location for each all anchor. **PRE-DRILL** the holes for your chosen anchors (not included).

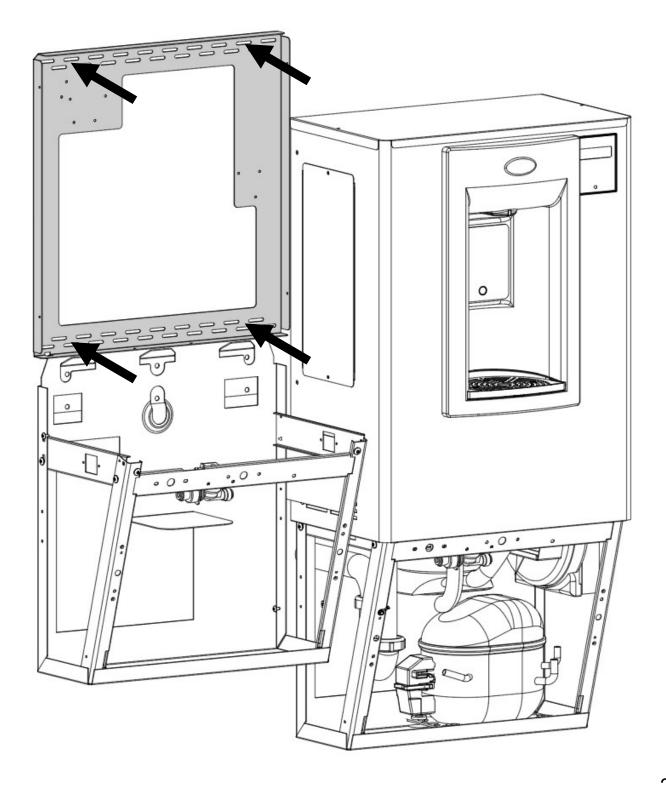


6. Remove the dummy unit from the wall hanger and place it out of the way. Completely assemble a NNEBFEZ or NNFEBFEZ to the **refrigerated side first (Refer to pages 11-19)**.

Follow all steps on page 16 with the provided drain supplies, but do not connect to the P-trap or other existing pipes.


Note: The fountain frame may be secured by two anchors at the lower corners. Remove the anchors and set aside until the unit is ready to be reinstalled to the wall.

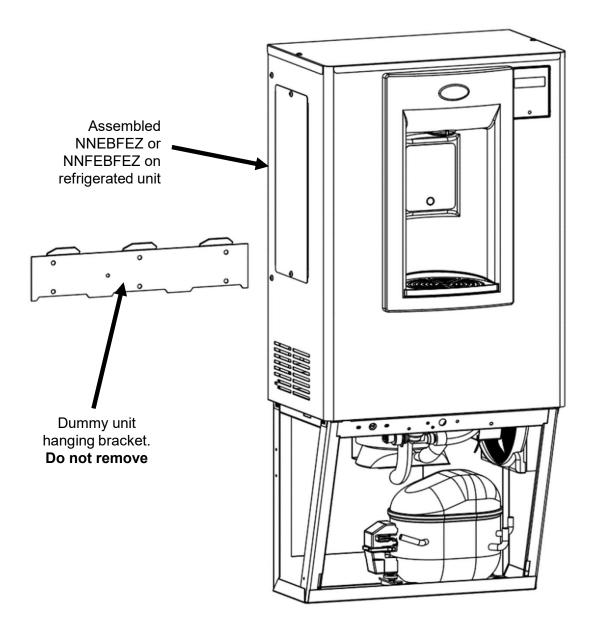

- Take the second NNEBFEZ out of the carton and prepare the unit as shown on page 11. Assemble the side brackets and center bracket to the dummy unit. Refer to page 13.
- 8. Lay the dummy unit on the floor and position the frame so that it sits on the top flange of the fountain frame, then assemble the drip tray assembly bracket to the unit. **Refer to page 12.** It is recommended that the filter guard bracket is not installed in this step.

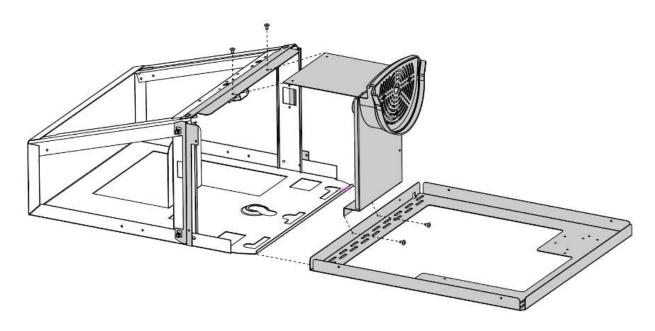


9. Assemble the provided drain elbows and short drainpipe to the drip tray drain.

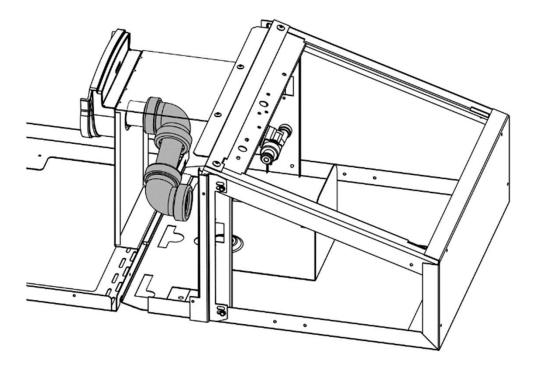


10. Assemble the supplied P-Clip roughly 36" from the grounded plug on the supplied power cord, then secure the P-Clip to the inside surface of the horizontal strut of the fountain frame with a #8 Torx screw.




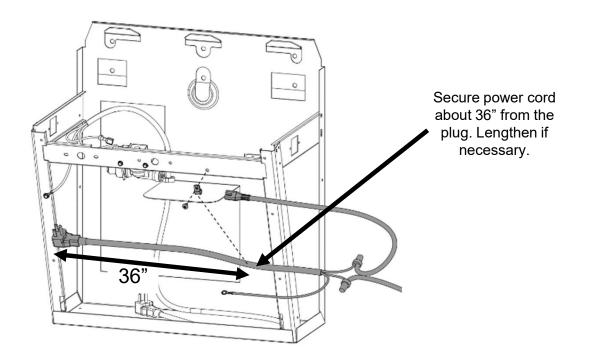


11. Install the ring terminal to the inside vertical strut of the dummy unit with the provided #8 thread cutting hex screw. Screw into one of the empty flared holes of the strut.

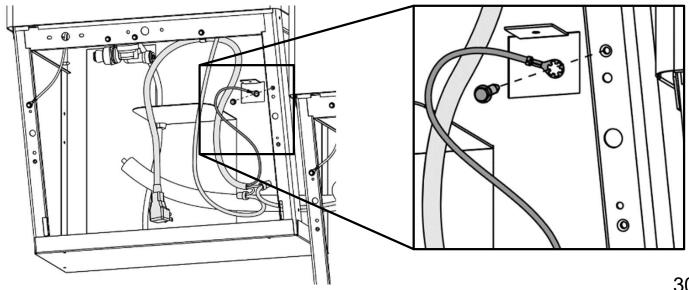


12. Disconnect the IEC connector from the power brick located behind the alcove. Set aside but do not discard the supplied power cord. Do not remove the power brick.

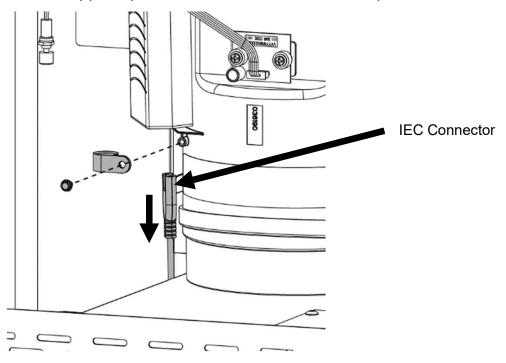

13. Secure the wrapper assembly to the unit by inserting the 6, #8 Torx screws into the frame and side brackets. **Refer to pages 17. Do not perform the steps on page 18 yet.**

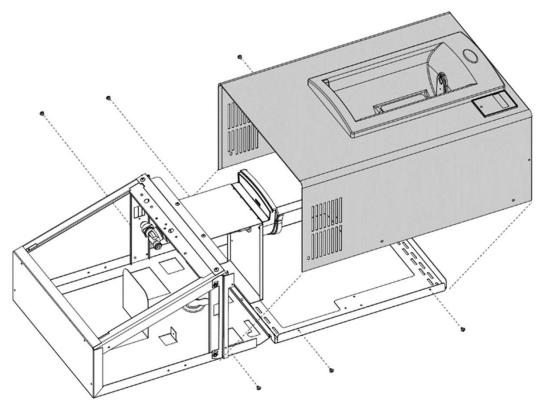


14. Pick up the assembly by taking hold of both the fountain frame and NNEBFEZ cabinet, then hang the fountain on the wall hanging bracket.

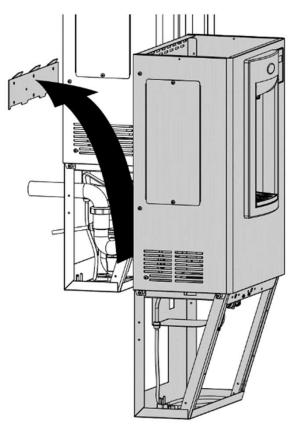

NOTE: Ensure that the NNEBFEZ frame sits on top of the fountain frame. Center the cabinet on the frame as shown on **page 12.** Some extra positioning may be necessary.


15. Ensure that the frame is flat against the wall and install your four chosen anchors (not supplied) into the wall to secure the unit. Ensure that the frame does not shift and is still centered, sitting on the frame of the cooler frame.

Once secured, follow step 11 on page 18 if necessary.

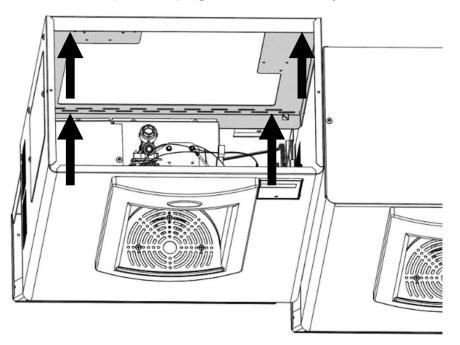


16. After the NNEBFEZ has been hung, the fountain frame may not properly sit back on the wall. Loosen the side screws so that the fountain may rest against the wall, then retighten the side screws.


NOTE: Only one side screw will be accessible on the side facing the other fountain unit. Loosen the most outward screw to allow the unit to fall into position, then re-tighten.

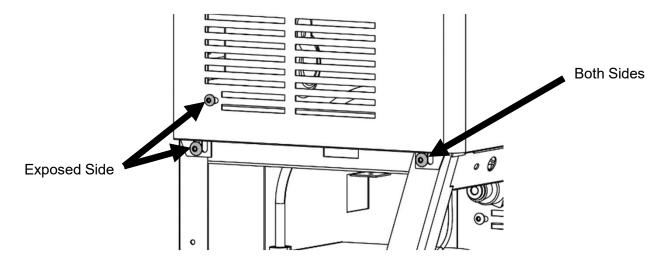

17. Install the provided long drainpipes to the elbow fittings of each unit. Next, install the Elkay drainpipes to connect the drains and then connect to the P-Trap. Cut provided pipes as needed.

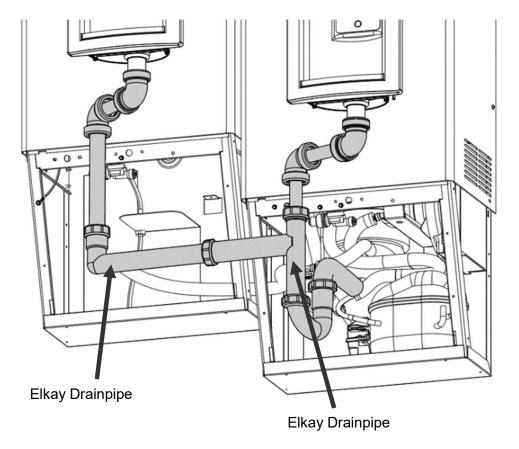

- 18. Connect the provided ¼" union fittings to the water-out lines of each fountain (see page 26). Connect the provided ¼" water lines and sponge tubing from each kit to the fountain water out lines and install into the solenoid located on top of the alcove. Reference page 19.
- 19. Turn on the water supply and check for leaks.
- 20. Plug in the power cords for the refrigerated unit and the cord for the NNEBFEZ units. DO NOT plug in the dummy unit power cord. Check for any malfunctions.
- 21. Reinstall the NNEBFEZ top panel and fountain wrappers with the appropriate screws.
- 22. The NNEBEFEZ comes pre-programmed from the factory. For programming options, please refer to **page 35.**

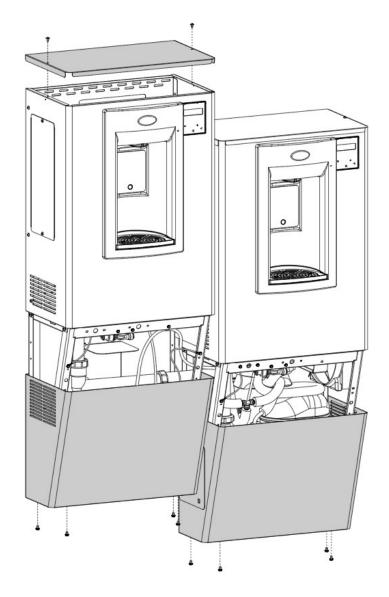


Section 6: Set-Up Guide For OASIS[®] Hands-Free Bottle Filler Electronics

Factory default program settings are:

- Units Gallons
- Unfiltered unit
- Flow Meter = Rate Selected
- Filter Capacity = 1250 gallons [4731 liters] for a VersaFilter
- Bottle Count = 0.5L (1 Bottle)
- Flow Rate = 1.2 GPM
- 20 second maximum dispense time

 For each model top cap will need to be set aside until programming is complete. Remove top cap by unscrewing two (2) T15 torx screws if needed. Remove wire tie bundling pushbutton inside bottle filler and feed it through hole in cooler top. You can then adjust program using pushbutton through access panel of cooler.




Pushbutton

To change the program settings, follow these steps:

<u>Display</u>	<u>Action</u>					
00000000	Depress button for 3 seconds to enter into the following menu settings and make changes.					
BOTTLES REUSED	Note: at anytime it will exit menu and save settings when idle for 10 seconds (no button press) and					
(Home Screen)	revert back to Home Screen.					
LTR/GAL Depress button 3 seconds to change from Gallons to Liters,						
GAL or momentary press to advance to next menu.						
UNFILT/FILT?	Depress button 3 seconds to change from Unfiltered to Filtered unit,					
UNFILT UNIT or momentary press to advance to next menu.						
FLOW METER? Depress button 3 seconds to change from Rate Selected to (Flow) Meter Enabled,						
RATE SELECTED or momentary press to advance to next menu.						
SELECT RATE	To change flow rate, momentarily depress button to change whole gallon digit.					
1.2 GPM UNIT	1.2 GPM UNIT Hold button 3 seconds to advance to TENTHS of gallon digit.					
	Depress momentarily to change the digit.					
	Hold button 3 seconds to advance to the next menu.					
RESET 00000000 Depress button for 3 seconds to reset Gallon or Liter count,						
GALLON CNT	or momentary press to advance to next menu.					
[LTR COUNT]						
FILT CAPAC	Depress button for 3 seconds to change filter capacity to 3000 GAL [11355 liters] for Galaxi green					
OF 1250 GAL	filter, or Repeat this step to program for 4750 [18050 liters] gallons for Versafilter III					
[4731 LTR]	or momentary press to advance to next menu.					
3 sec rule?	Depress button for 3 seconds to switch from 0.5L bottle to 3 sec rule,					
0.5L	or momentary press to advance to next menu.					
	(The 3 Sec rule increases the bottle count based on a 3 second dispense.)					
Reset 00000000	Depress button for 3 seconds to reset (Home Screen) BOTTLES REUSED count,					
BOT COUNT? or momentary press to advance to next menu.						
Bot Filler Depress button for 3 seconds to change maximum dispense time to 10, 20 or 30 s						
Set_time: 20 s or momentary press to advance to next menu.						
RUN CAL	Depress button 3 seconds to run calibration again,					
AGAIN?	or momentary press to advance to next menu.					

Section 5: Parts Breakdown

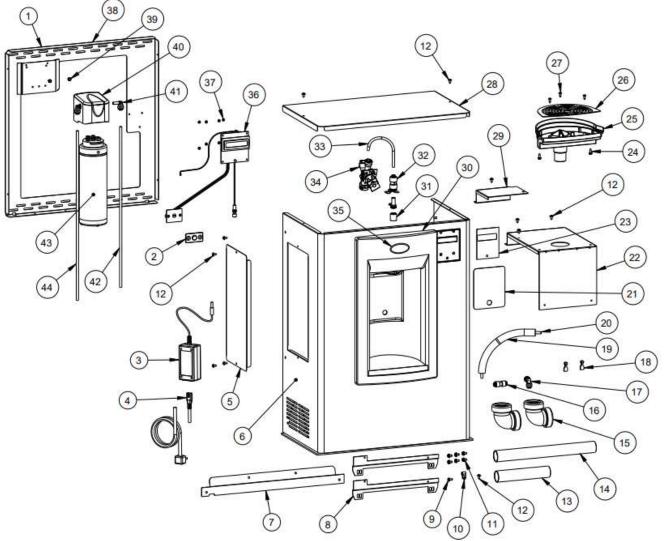

ITEM	QTY	P/N	Description	ITEM	QTY	P/N	Description
1	1	041245-001	Frame	19	1	017681-003-SP	Insulation, Sponge Tube 9"
2	1	038037-001	Lens, IR Bottle Filler	20	1	030152-102-SP	Tube, PE 10" Long
3	1	038036-003	Power Supply, 100-240VAC/12VDC	21	1	038031-006	Label, Alcove Sensor
4	1	041207-001-SP	Power Cord Assembly	22	1	041244-002	Bracket, Drain
5	1	041241-001	Panel, Filter	23	1	038031-005	Label, LCD Bezel
6	1	041238-001	Wrapper	24	2	026642-006	Screw, Hex HD Tapping #8 x 1/2"
7	1	041243-001	Bracket, Center	25	1	036191-001	Drain
8	2	041242-001	Bracket, Side	26	1	036192-001	Grille, Stainless
9	1	026670-001	Screw, Hex HD Machine #8 x 3/8"	27	3	026675-003	Screw, Flat HD Tapping #8 x 1/2"
10	1	018541	Clamp, Strain Relief	28	1	041239-001	Panel, Top
11	6	026642-010	Screw, Hex HD Tapping #10 x 3/8"	29	1	041246-001	Bracket, Filter Support
12	15	031875-003	Screw, Truss HD Tapping Torx #8	30	1	036190-003	Alcove
13	1	036010-002	Waste Tube 6.13"	31	1	038032-001	Flow Nozzle Assembly
14	1	036010-013	Waste Tube 16.63"	32	1	028668-101	Fitting, PP Reducing Union
15	2	A020967	1-1/2" Elbow, W/Nuts, 1-1/4"	33	1	030152-033-SP	Tube, PE 6.5" Long
16	1	028605-101	Fitting, PP Union 1/4"OD	34	1	038030-002	Solenoid Valve 12VDC
17	1	028481-101	Fitting, PP Union Elbow 1/4"OD	35	1	031434-014	Nameplate, Oasis
18	2	026923	Terminal, .250" Insulated Straight	36	1	038026-002	Electronics Assembly, IR/LCD
				37	8	026824-026	Nut, Hex Nylon #4
For NNFEBFEZ Only							
38	1	041410-003	Filter Bracket Frame Assembly				
39	2	026642-003	Screw, Hex HD Tapping #8 x 3/8"				
40	1	041146-001	Head Assy, Manifold w/Elbow Ftg.				
41	1	029994-103	Fitting, PP Elbow Plug-in 1/4"OD				
42	1	030152-031-SP	Tube, PE 30" Long				
43	1	041145-001	Filter Cartridge, Versafilter III				

36

OWNER'S COPY 1 YEAR BOTTLE FILLER LIMITED WARRANTY

FIRST YEAR

The manufacturer promises the original purchaser (user) to repair, give credit for, or, at the manufacturer's option, to replace any part of this bottle filler which proves to be inoperative due to a defect in material or workmanship under normal use, for a period of one year from the date of original installation or for a period of eighteen (18) months after date of shipment from the factory, whichever occurs first. During the one year warranty, the Manufacturer will either replace, give credit for, or repair the bottle filler through its approved service center or factory repair department, and provide labor and parts necessary to correct such inoperative condition at no charge, if it has been installed and operated in accordance with the written instruction furnished with the bottle filler.

If it becomes necessary to ship the inoperative bottle filler to the approved service center or factory repair department, the Manufacturer will pay the transportation charges both ways via common carrier. Local delivery charges are not covered.

The cost of labor required to disconnect and reconnect plumbing and electrical connections will be the responsibility of the user (owner).

GENERAL PROVISIONS AND EXCLUSIONS:

This warranty applies only within the Continental Limits of the United States of America and Canada.

This warranty does not apply and no agreement, either expressed or implied, shall be applicable if the affixed serial number is removed, defaced or obliterated.

This warranty does not apply to any water components that become inoperative due to liming conditions.

This warranty does not apply to any bottle filler or components that become inoperable because of a failure to satisfy standards or regulations adopted by any government or agency thereof subsequent to the date of shipment from the factory.

This warranty does not cover performance, failure or damages of any parts resulting from external causes such as alterations, abuse, misuse, misapplication, corrosion of acts of God.

This warranty applies only to the bottle filler portion. It does not apply to the water cooler. Refer to the water cooler warranty for coverage.

WARNING

Alteration or modification of this machine may cause serious flooding and/or hazardous electrical shock or fire. Except as set forth herein, the Manufacturer makes no other warranty, guarantee or agreement expressed,

implied or statutory, including any implied warranty of merchantability or fitness for a particular purpose. The foregoing is in lieu of all other agreements expressed, implied or statutory and all other obligations or

liabilities of the Manufacturer. The Manufacturer does not assume or authorize any person to assume any obligations of liability in connection with this product. In no event will the Manufacturer be liable for special or consequential damages or for any delay in the performance of this agreement due to causes beyond their control.



OASIS International 222 East Campus View BLVD • Columbus, OH 43235 U.S.A.

> Phone: 1-800-950-3226 Email: www.oasiscoolers.com

OASIS is a registered trademark of LVD Acquisition, LLC dba OASIS International

Installation of the NNEBFEZ or NNFEBFEZ could void the original water fountain warranty.

Model NNEBFEZ and NNFEBFEZ Chilled Bottle Filler Retrofit Kit for ELKAY EZ8 and LZ8 Water Coolers

Installation Instructions



P/N 030099-640 Rev G Date: 05/2022 © 2022 LVD Acquisition, LLC

Oasis, Aqua Pointe, Versacooler and VersaFiller are registered trademarks of LVD Acquisition, LLC dba Oasis International

The ELKAY trademark is registered and owned by Elkay Manufacturing Company. OASIS International is not affiliated with Elkay Manufacturing Company in any way. No OASIS International Products are associated or affiliated with, sponsored or endorsed by the Elkay Manufacturing Company.



OASIS INTERNATIONAL 222 East Campus View Blvd. Columbus, OH 43235 614-861-1350 www.oasiscoolers.com