




# NNEBFEZ NNFEBFEZ with VersaFilter III

Cooler to Bottle Filler Conversion Kit for Single and Split Level ELKAY EZ8 and LZ8 Water Coolers

**INSTALLATION INSTRUCTIONS** 

### What's Included:

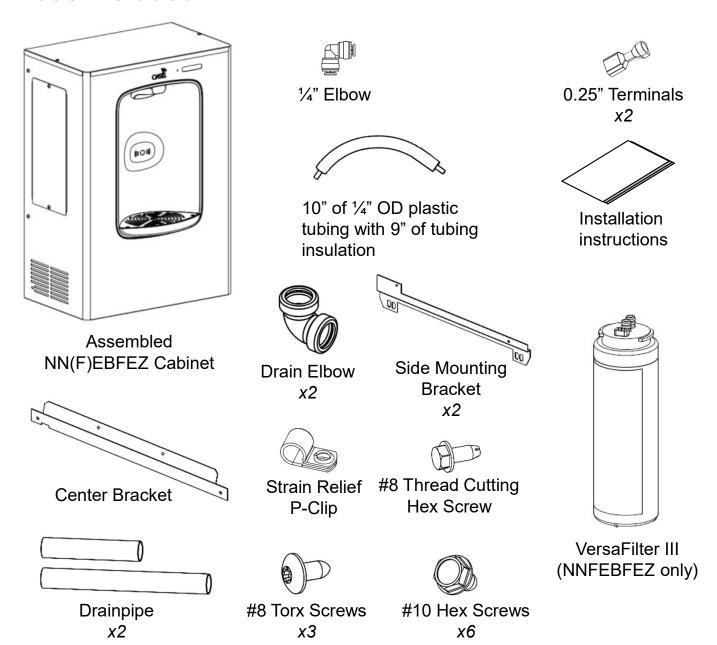


#### **Tools & Hardware Required:**

- Electric drill/driver
- Small tubing cutter for plastic line
- 5/16" nut driver
- 1/4" nut driver


- Means to cut 1 1/4" drain pipe
- T15 Torx screwdriver or bit
- T20 Torx screwdriver or bit
- 4 appropriate wall anchors (not supplied)

### Section 2: Rough In Drawing

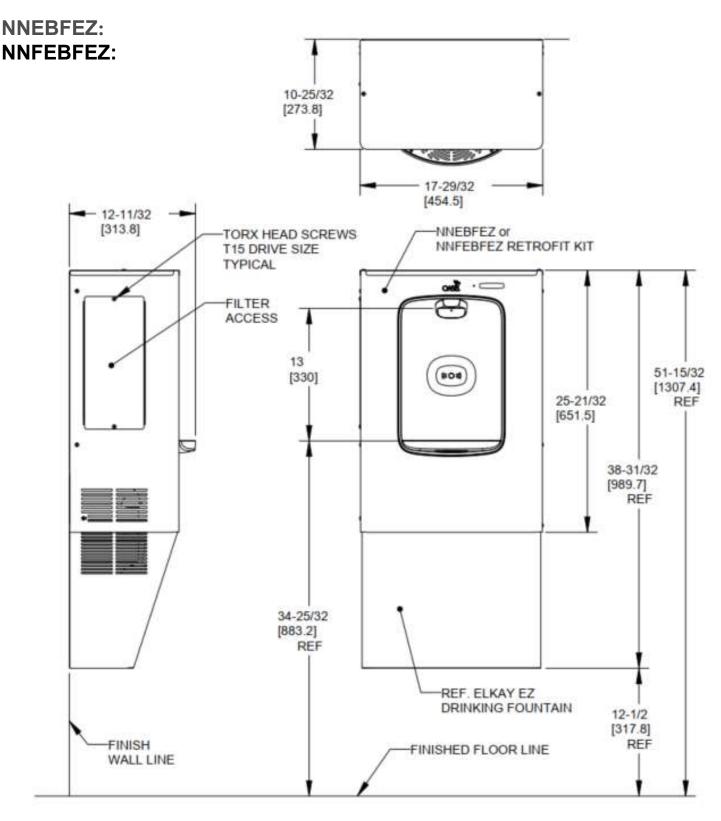

#### NOTES:

 ALL DIMENSIONS ARE IN INCHES. DIMENSTIONS IN BRACKETS [] ARE MILLIMETERS.

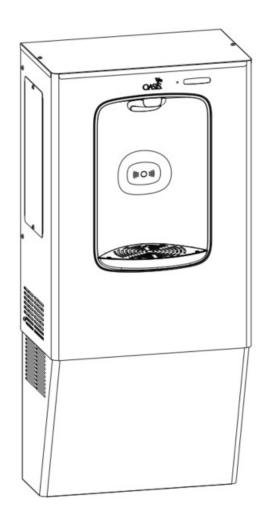


### SINGLE LEVEL PREPARATION

- Disassembly of ELKAY Cooler
- Wiring
- Water Lines


1. Remove fountain wrapper.

2. Turn OFF water supply to the unit. Bleed any remaining pressure from the lines by activating the bubbler valve.

3. Disconnect power by <u>UNPLUGGING</u> the unit from the wall socket.

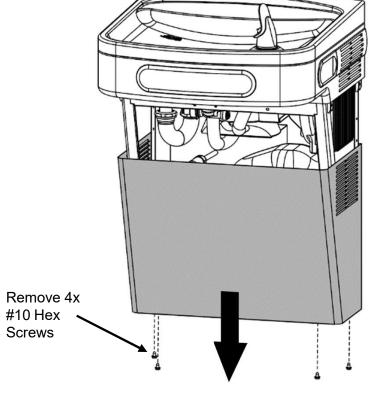


4. Loosen or remove the P-trap so that the fountain nose assembly may be freely removed in the next step.

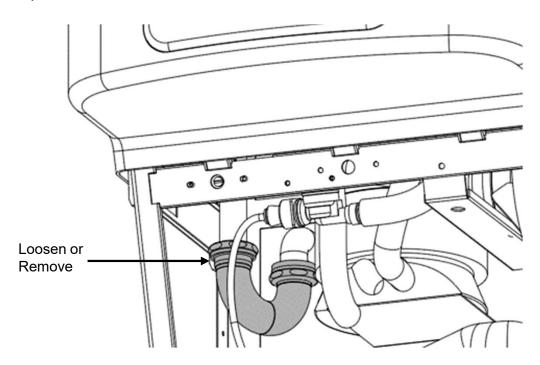


- 5. Remove fountain nose assembly. Tool Needed: T20 Torx bit
  - A. Remove 4x #10 Torx screws from the fountain.
  - B. Disconnect ONLY the nose assembly wires from the cold control and solenoid valve. Leave all other wires connected to the cold control and solenoid valve. For non-refrigerated models, unplug the unit.
  - C. Disconnect the water line from the bubbler inside the nose. DO NOT disconnect from the fountain.

### DO NOT REMOVE COLD CONTROL OR SOLENOID VALVE ASSEMBLIES FROM THE FOUNTAIN.

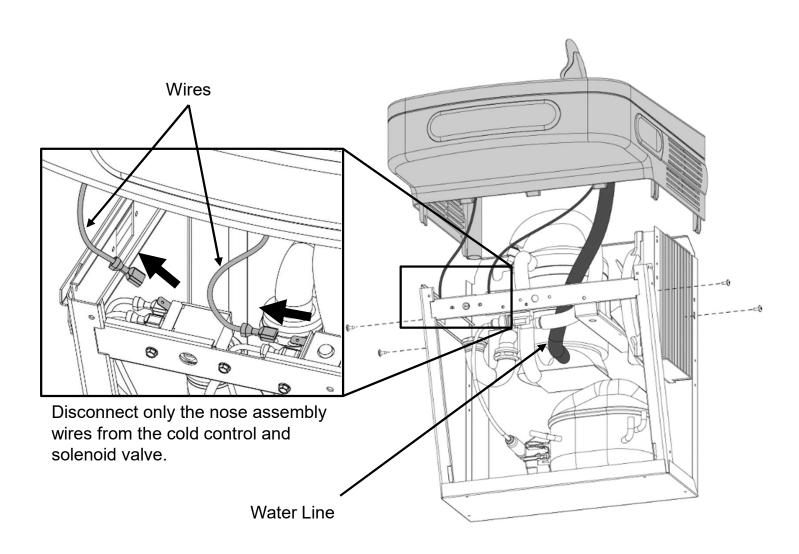


6. After the nose assembly has been removed, cover the two bare terminals with the insulated female spade terminals (provided) for safety.

NOTE: The image shown may differ from some models but the instructions will still apply.

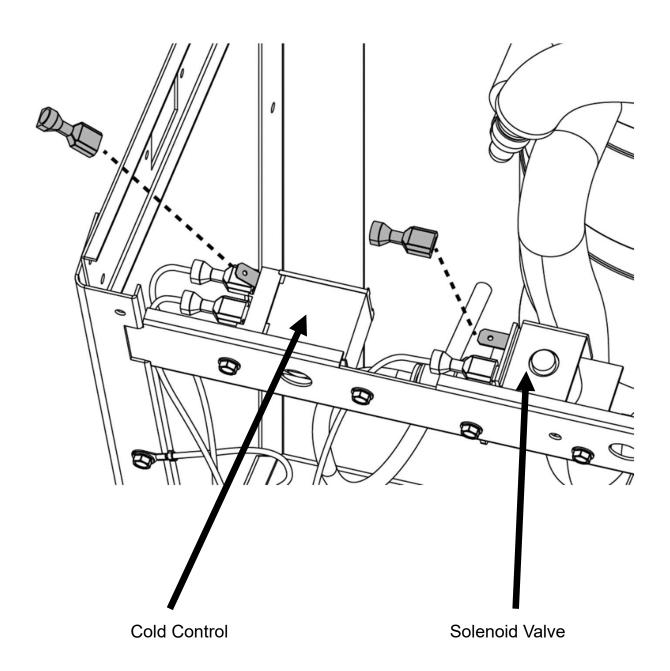

7. Locate the solenoid valve on the Elkay unit. Disconnect both water lines from the solenoid valve. Join the two water lines together using a ½" elbow fitting (provided) (Fig. 7A). For filtered model NNFEBFEZ with the VersaFilter III skip to next page, Section 3A: Step 8.

Allow the cooling tank water outlet line to extend freely upward (Fig. 7B).

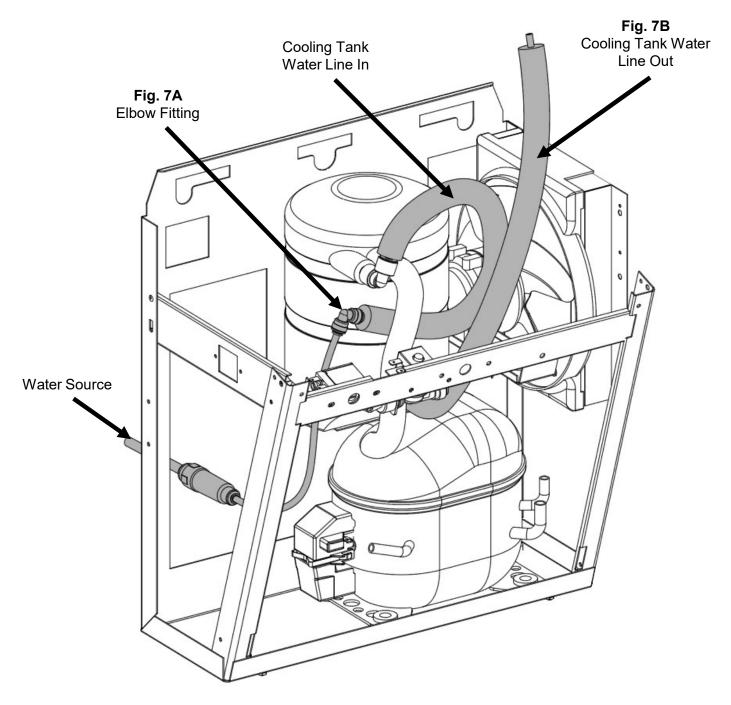


Shown above is the correct final orientation

8. Model NNFEBFEZ with VersaFilter III: Locate the solenoid valve on the Elkay unit. Disconnect both water lines from the solenoid valve. Add 1/4" elbow fitting (provided) (Fig. 8A) to Cooling Tank Water Line In. Remove 1/4"OD water source line.

Allow the cooling tank water outlet line to extend freely upward (Fig. 8B).


In future steps after the NNFEBFEZ frame assembly is installed, the Inlet Line on the VersaFilter III head assembly will be connected to the Water Source Fitting (Fig. 8C) and the Outlet Line on the head assembly will be connected to the Cooling Tank Water Inlet Elbow Fitting (Fig. 8A).

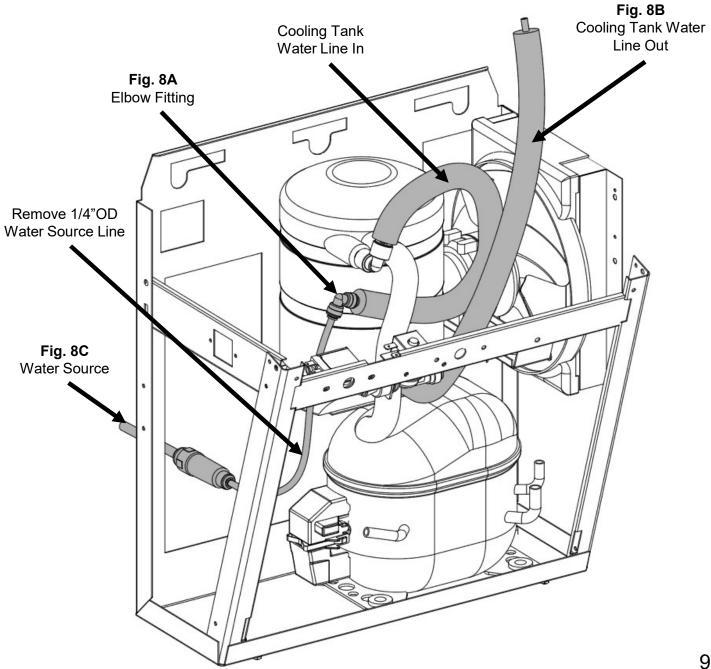


### SINGLE LEVEL INSTALLATION

- Assembly of NNEBFEZ & NNFEBFEZ Cabinet
- Wiring
- Plumbing


1. The NNEBFEZ and the NNFEBFEZ come partially assembled for shipping. Remove the kit from the packaging and separate it into the assemblies and components shown below. Be sure not to misplace the provided mounting screws and insulated terminals.

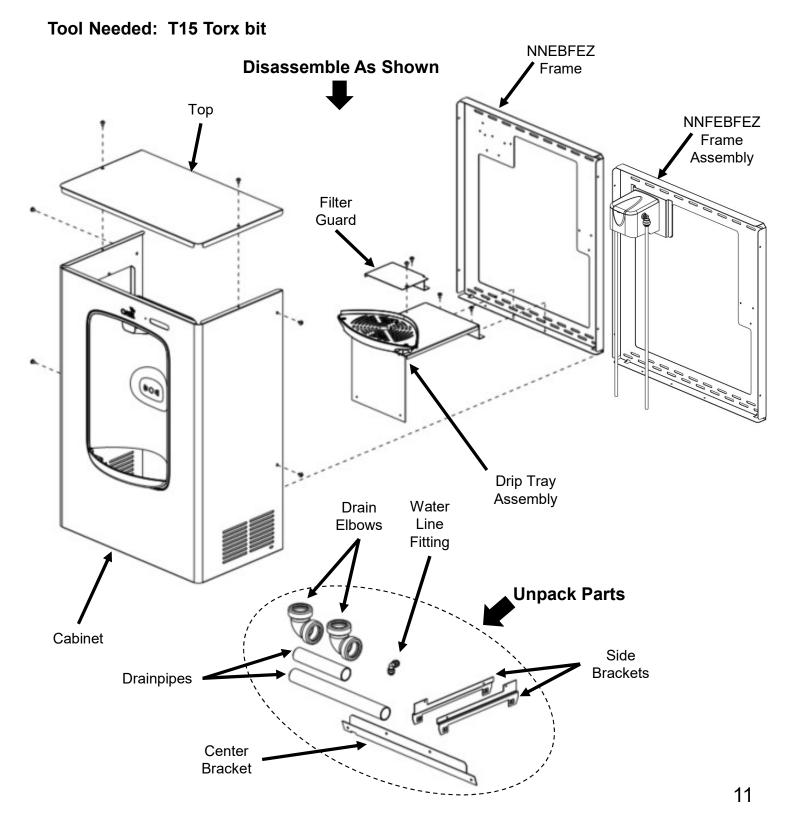


2. Without taking the cooler off the wall, place the retrofit frame against the wall and set it onto the top flange of the cooler frame.

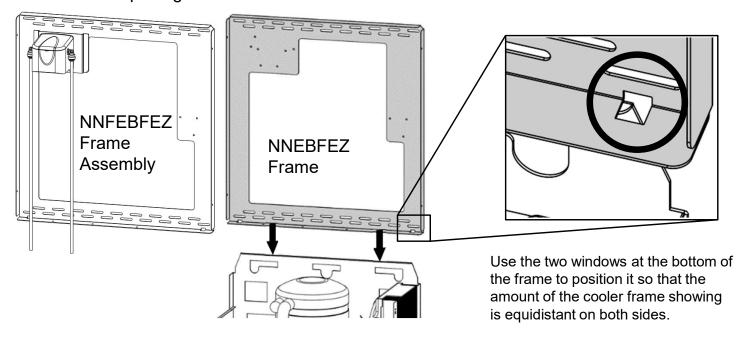



3. Affix the frame to the wall with at least 4 anchors into any appropriate anchor points through the staggered slotted holes. **Be careful to ensure the frame stays centered on the cooler frame.** 

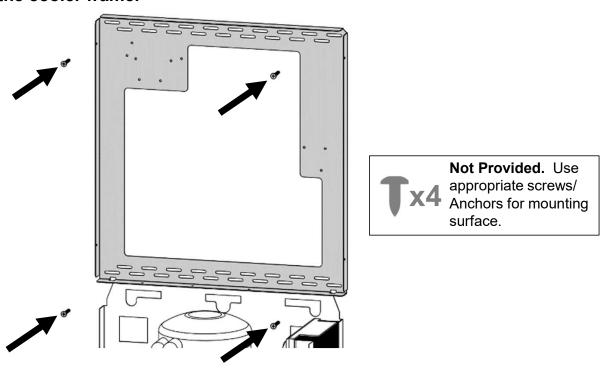

 
4. Assemble the center bracket to the holes in each of the cooler struts.

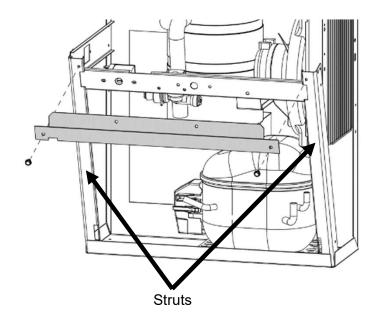


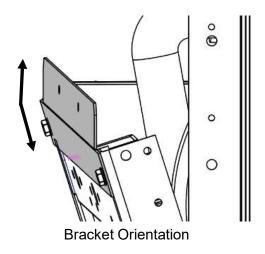




 5. Assemble the two side brackets to the cooler frame using the slotted holes on the bottom with two #10 screws for each bracket. Ensure that the brackets are oriented as shown below.

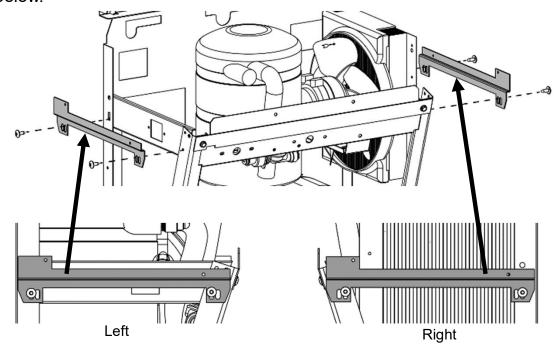





6. Install the drip tray support bracket (keep drip tray pre-assembled) to the center bracket and frame using 4x, #8 Torx screws which are provided in the kit.

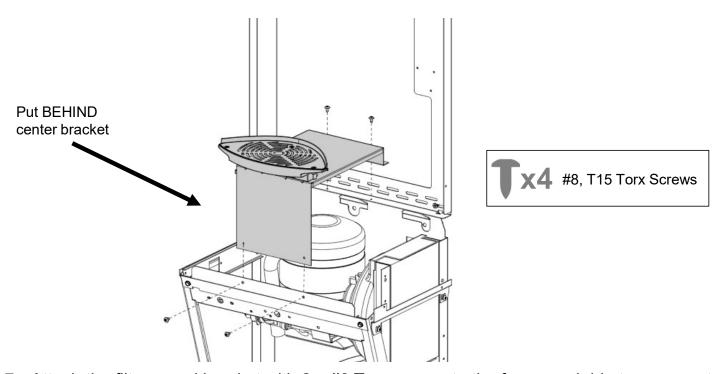

7. Attach the filter guard bracket with 2x, #8 Torx screws to the frame and drip tray support bracket. This bracket helps to prevent the filter cartridge from falling into the cooler unit below during installation or replacement.

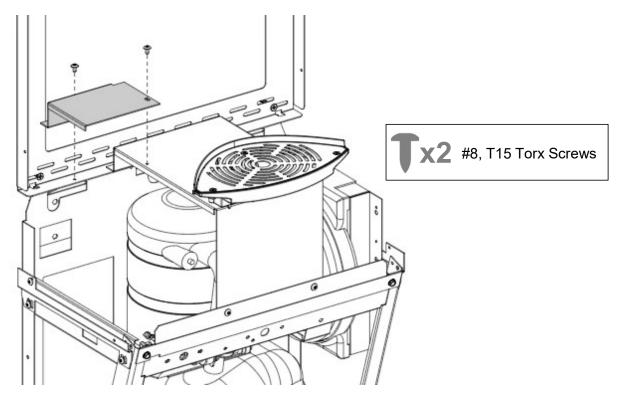


8. Model NNFEBFEZ with VersaFilter III: Insert Filter Head Inlet Line into water source (Fig. 8A). Install VersaFilter III Filter Cartridge to Filter Head Assembly. See instructions on filter cartridge for Installation Instructions and for Filter Flushing Instructions. Direct Filter Head Outlet Tube to a container to collect water for flushing the filter. Turn on water. Flush till water is clear. When flushing is complete, turn off the water and insert Filter Head Outlet Tube into elbow fitting (provided) (Fig. 8B).

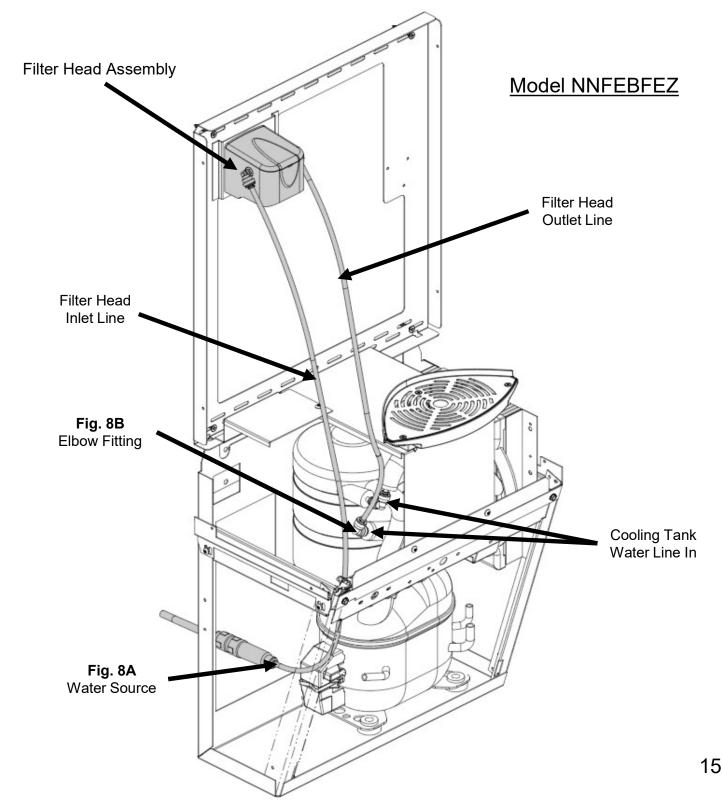


9. Attach one of the drain elbows to the drip tray stem. Insert the drainpipe provided into the elbow and then attach another elbow onto the pipe. Use the remaining drainpipe and connect the drip tray drainage system to the installed P-trap.

NOTE: Drainpipes will need to be positioned and cut to length as needed.

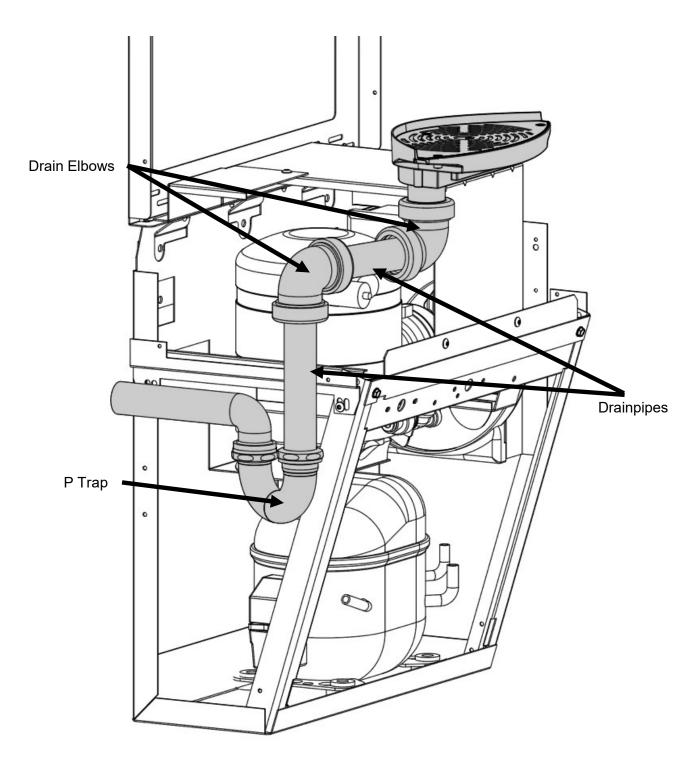


10. Assemble NNEBFEZ or NNFEBFEZ wrapper to the installed frame. Rest the alcove on the drip tray and ensure the wrapper walls rest OUTSIDE of the frame and side brackets.


NOTE: The drip tray will hold the weight of the wrapper but it is recommended to keep a hold on the unit during installation for safety.

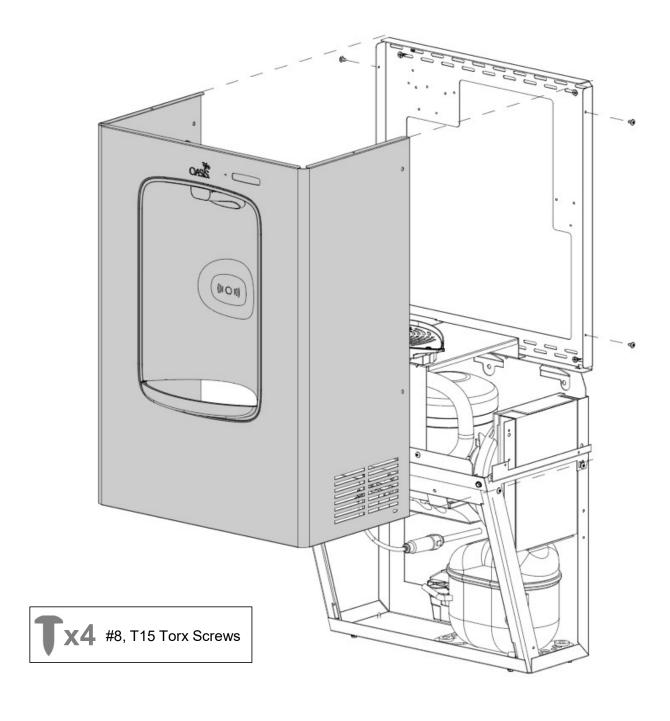


11. If the outer edge of the drip tray is not properly aligned, loosen the screws on the back of the drip tray support bracket and slide the bracket forward or backward as needed.

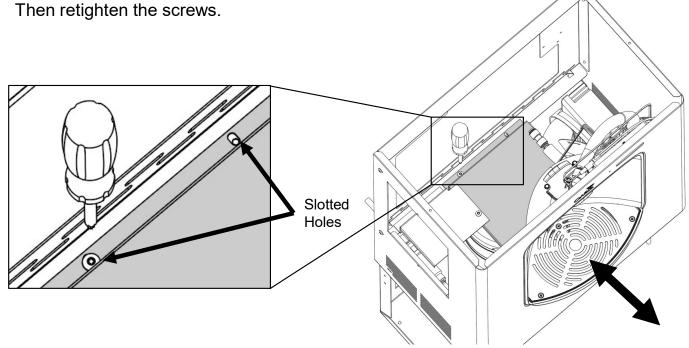


12. Once the wrapper has been installed, loosen the side bracket mounting screws until the bracket can be slid up and down. Adjust the bracket until the mounting hole screws through the slot and then drive in one of the #8 Torx screws and then tighten the two #10 mounting screws.

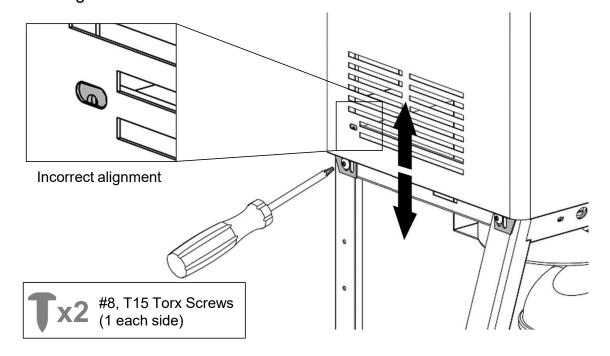


13. Attach the 1/4" union fitting to the Cooling Tank Water Outlet Line Out (Fig 13A).

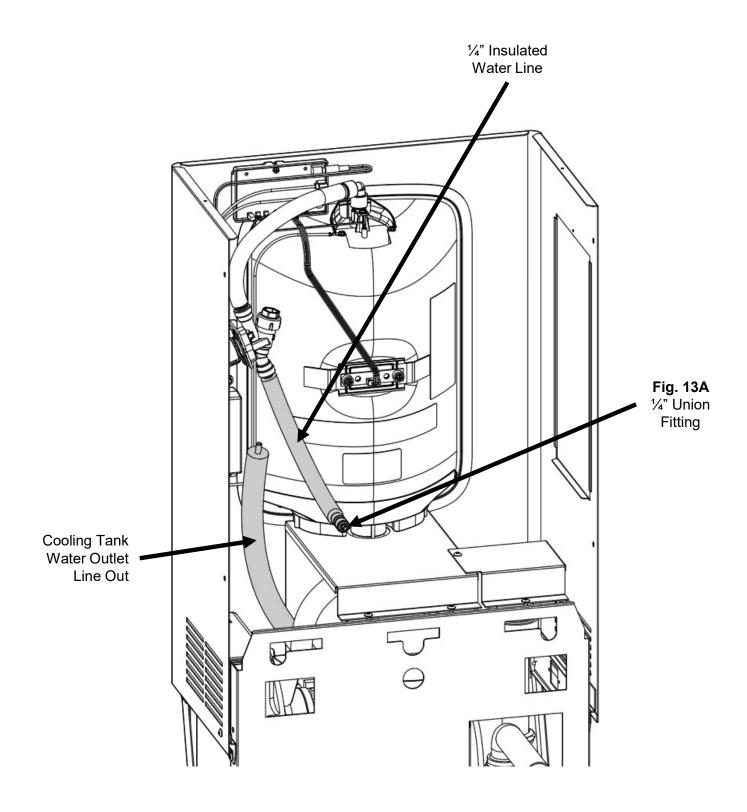


14. Guide the power cord down to the lower portion of the cooler. Ensure that the power cord does not become entangled with other components and ensure that the IEC connector is firmly installed into the power brick.

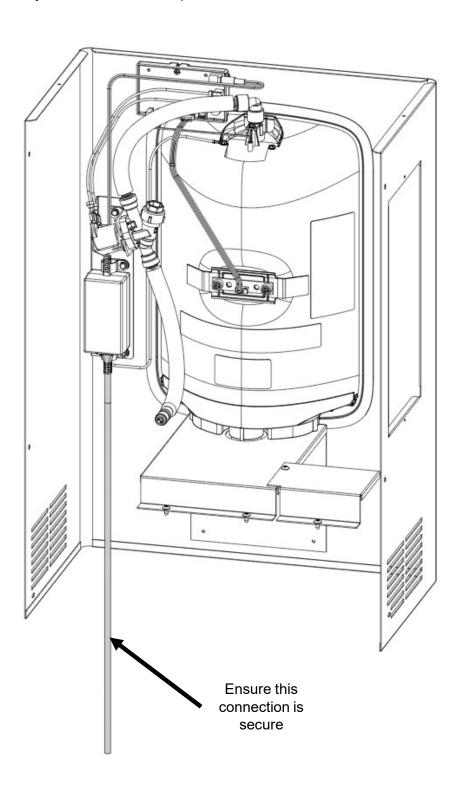


- 15. Install the provided strain relief P-Clip to the power cord roughly 36" from the grounded plug. Attach it to the back side flange of the fountain frame with a #8 Torx screw. (Figure 15a)
- 16. Attach the ring terminal to the ground screw on the left side of the fountain strut through the lower flared hole using the provided #8 thread cutting hex Screw. (Fig 16a). Do not remove/alter the original ground.
- 17. Finish by plugging in the grounded plug into the duplex socket.

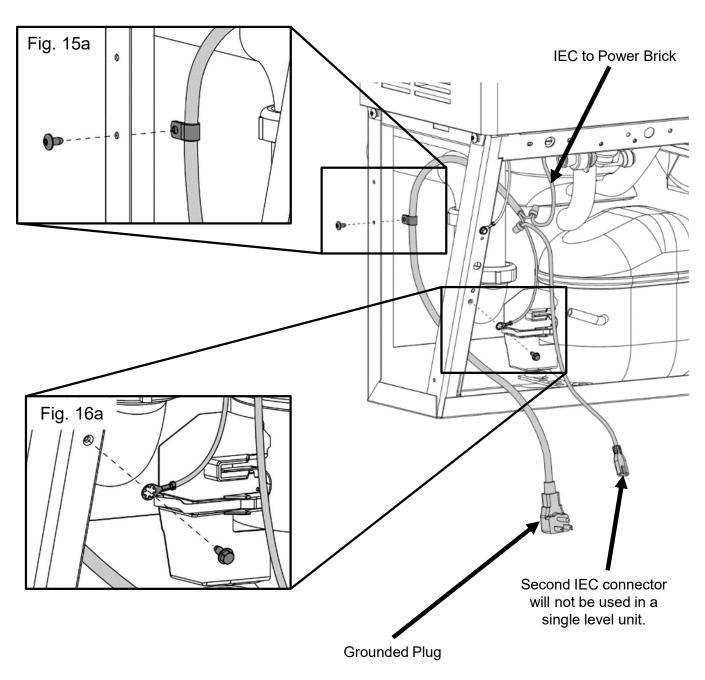

- 18. Turn on water supply and check for any leaks.
- 19. Ensure that nothing is obstructing the fan blade.
- 20. Plug the Elkay power cord into the wall outlet.
- 21. Test the contactless bottle filler by placing a water bottle into the alcove of the bottle filler. Check for leaks.
- 22. Install the cabinet top panel, filter access panel and Elkay cooler wrapper.
- 23. The NNEBEFEZ and NNFEBFEZ comes pre-programmed from the factory. For programming options, please refer to **page 35.**

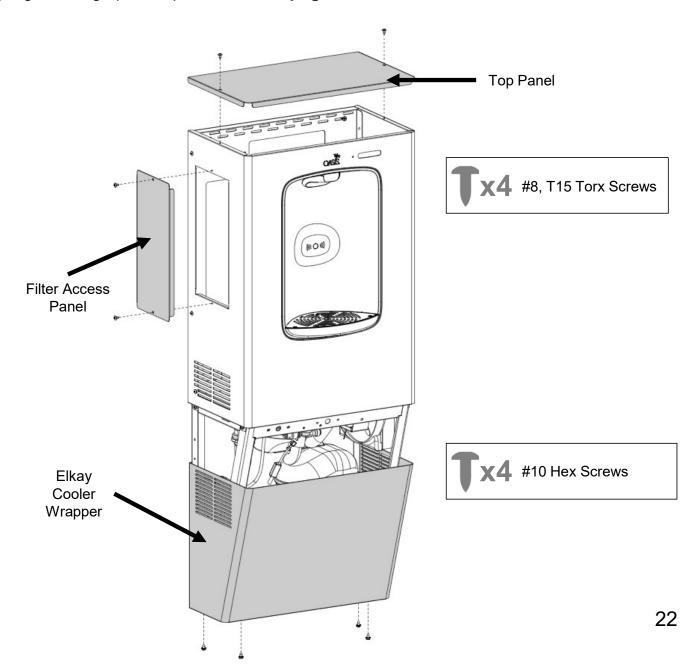

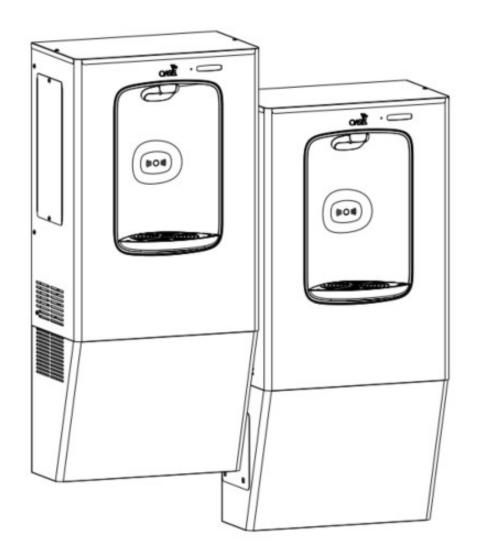


### **SPLIT LEVEL INSTALLATION**

- Assembly of Split Level NNEBFEZ and NNFEBFEZ Cabinet
- Wiring
- Plumbing

### Section 5: Rough In Drawing

## NN(F)EBFEZ Split Level: Left Side or Right Side High REQUIRES 2X NNEBFEZ UNITS or 1X NNFEBFEZ and 1X NNEBFEZ

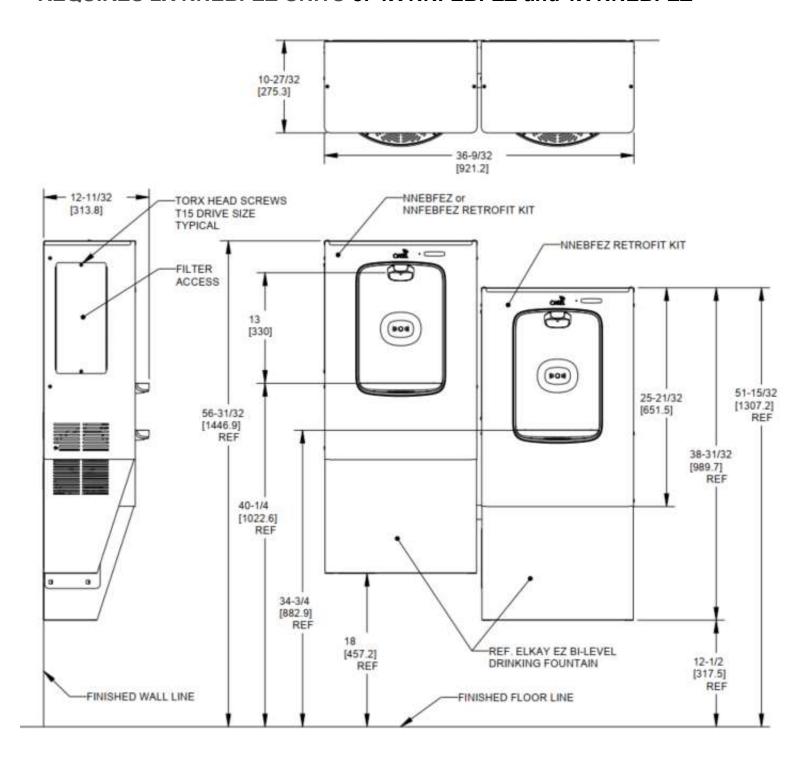


#### NOTES:

1. ALL DIMENSIONS ARE IN INCHES.
DIMENSTIONS IN BRACKETS [] ARE MILLIMETERS.

### Section 6: Split Level Preparation


- 1. Remove the fountain wrappers and noses from each unit as shown on **pages 5-6** to prepare the units for the NNEBFEZ or the NNFEBFEZ installation. Unplug BOTH units and shut off their water source.
  - Cover any bare terminals. Refer to page 7.
- 2. Begin split level assembly by disconnecting and removing any drainpipes except for the p-trap and disconnecting the water lines between the fountain units. **Ensure water to the units has been turned off.**
- 3. Since the split level fountain cold tank is already pressurized, disconnect all water lines from the solenoid valves in both the refrigerated and dummy unit. Do not discard any water tubing.

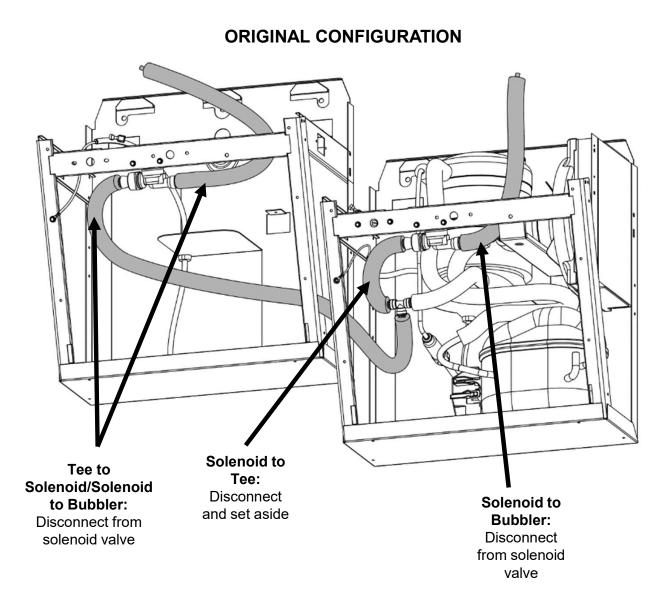

### Section 6: Split Level Preparation


4. The final result should have the water line from the cold tank water outlet connect to the tee and split off to the dummy unit and up to the top of the refrigerated unit.

### NNEBFEZ or NNFEBFEZ CONFIGURATION

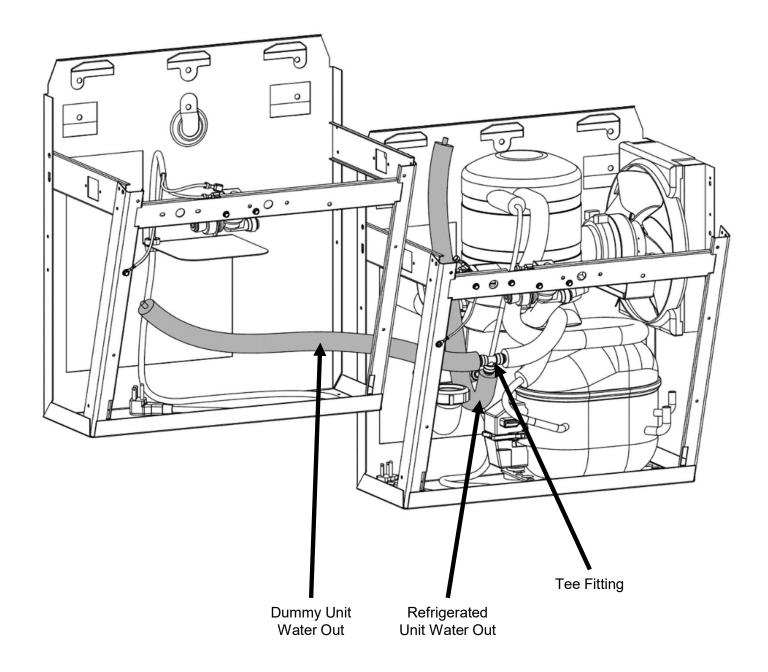

### Section 6: Split Level Preparation


5. Set the frame from the second NNEBFEZ kit or the Filtered NNFEBFEZ kit onto the top of the dummy unit frame and mark the location for each anchor. **PRE-DRILL** the holes for your chosen anchors (not included).

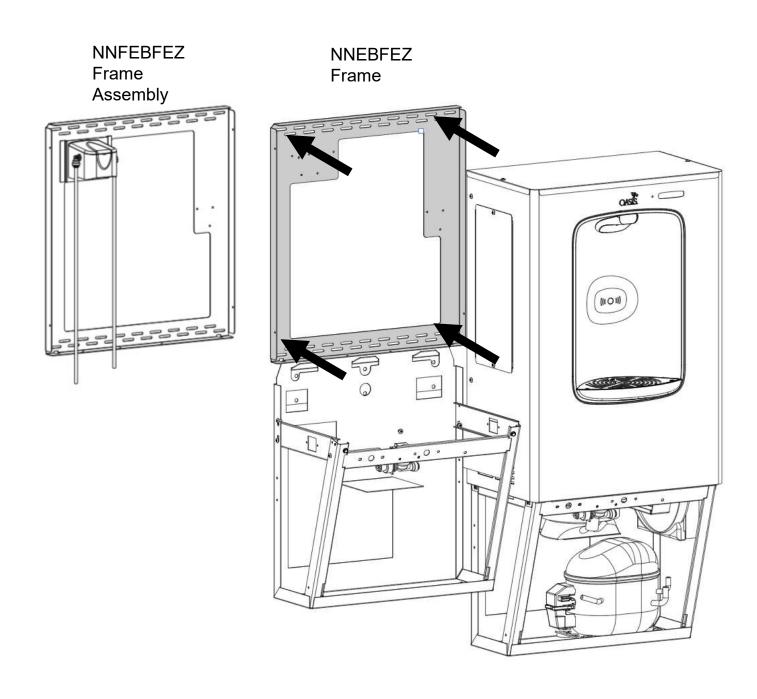


6. Remove the dummy unit from the wall hanger and place it out of the way. Completely assemble a NNEBFEZ to the **refrigerated side first (Refer to pages 11-19)**.

Follow all steps on page 16 with the provided drain supplies, but do not connect to the P-trap or other existing pipes.


**Note:** The fountain frame may be secured by two anchors at the lower corners. Remove the anchors and set aside until the unit is ready to be reinstalled to the wall.

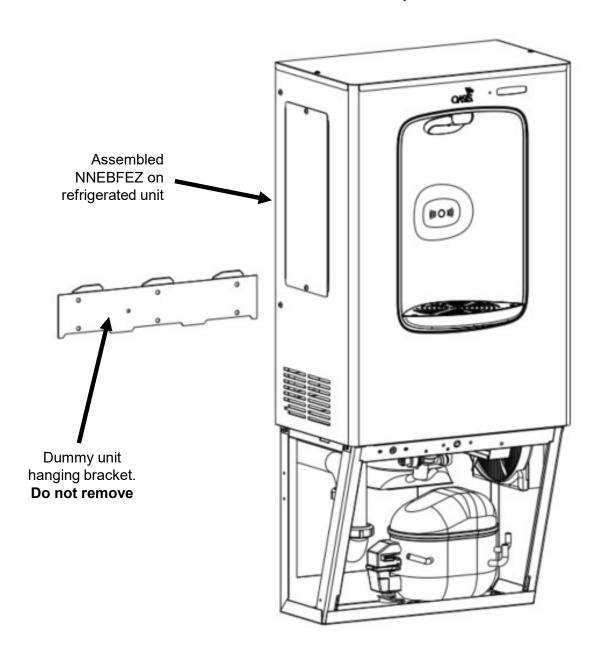

- 7. Take the second NNEBFEZ or the Filtered NNFEBFEZ out of the carton and prepare the unit as shown on **page 11**. Assemble the side brackets and center bracket to the dummy unit. **Refer to page 13**.
- 8. Lay the dummy unit on the floor and position the frame so that it sits on the top flange of the fountain frame, then assemble the drip tray assembly bracket to the unit. **Refer to page 12.** It is recommended that the filter guard bracket is not installed in this step.

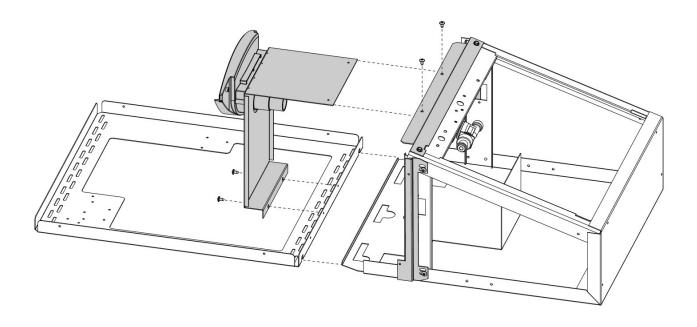


9. Assemble the provided drain elbows and short drainpipe to the drip tray drain.

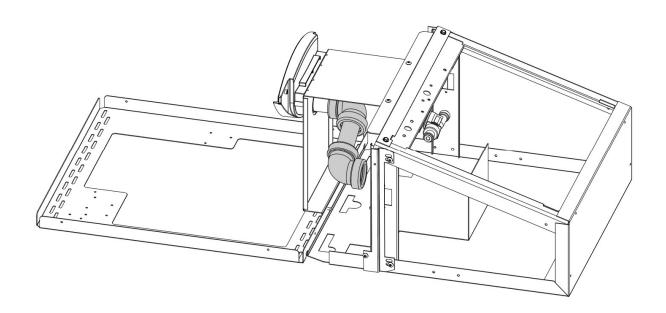


10. Assemble the supplied P-Clip roughly 36" from the grounded plug on the supplied power cord, then secure the P-Clip to the inside surface of the horizontal strut of the fountain frame with a #8 Torx screw.


**NOTE:** Only one of the two power cords from the kits will be used.

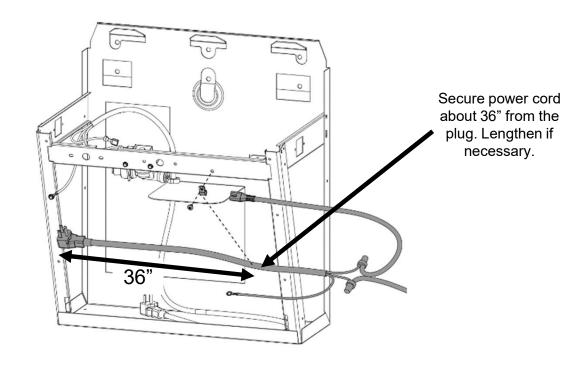


11. Install the ring terminal to the inside vertical strut of the dummy unit with the provided #8 thread cutting hex screw. Screw into one of the empty flared holes of the strut.

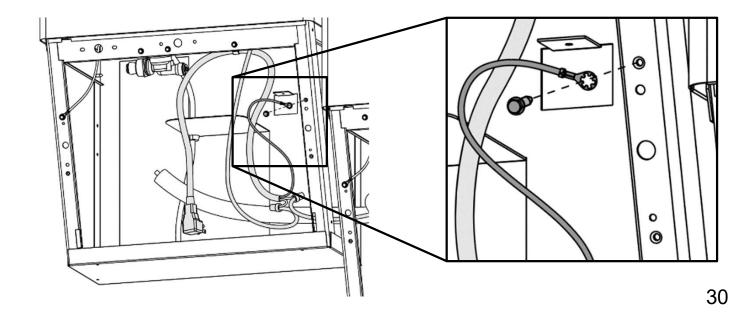


12. Disconnect the IEC connector from the power brick located behind the alcove. Set aside but do not discard the supplied power cord. Do not remove the power brick.

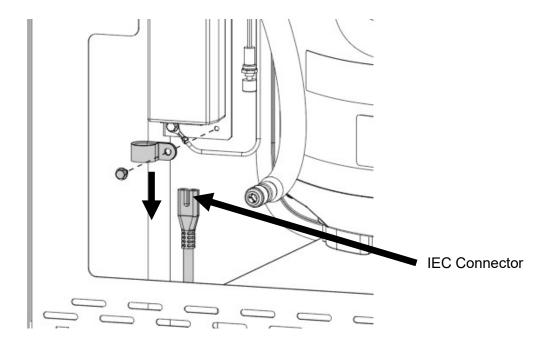

13. Secure the wrapper assembly to the unit by inserting the 6, #8 Torx screws into the frame and side brackets. **Refer to pages 17. Do not perform the steps on page 18 yet.** 

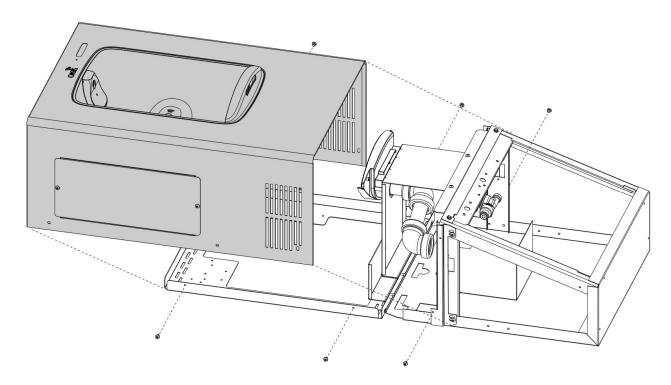


14. Pick up the assembly by taking hold of both the fountain frame and NNEBFEZ or Filtered NNFEBFEZ cabinet, then hang the fountain on the wall hanging bracket.

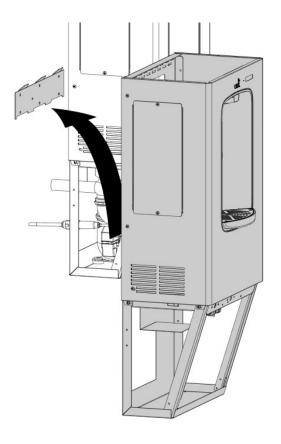

**NOTE:** Ensure that the NNEBFEZ or NNFEBFEZ frame sits on top of the fountain frame. Center the cabinet on the frame as shown on **page 12**. Some extra positioning may be necessary.


15. Ensure that the frame is flat against the wall and install your four chosen anchors (not supplied) into the wall to secure the unit. Ensure that the frame does not shift and is still centered, sitting on the frame of the cooler frame.

Once secured, follow step 11 on page 18 if necessary.

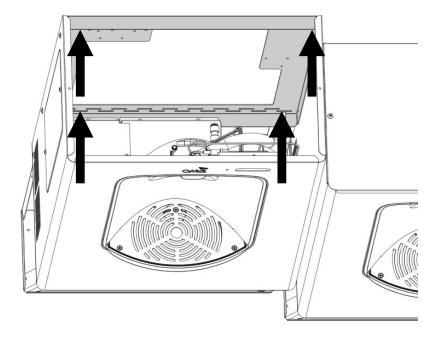


16. After the NNEBFEZ or the Filtered NNFEBFEZ has been hung, the fountain frame may not properly sit back on the wall. Loosen the side screws so that the fountain may rest against the wall, then re-tighten the side screws.


**NOTE:** Only one side screw will be accessible on the side facing the other fountain unit. Loosen the most outward screw to allow the unit to fall into position, then re-tighten.

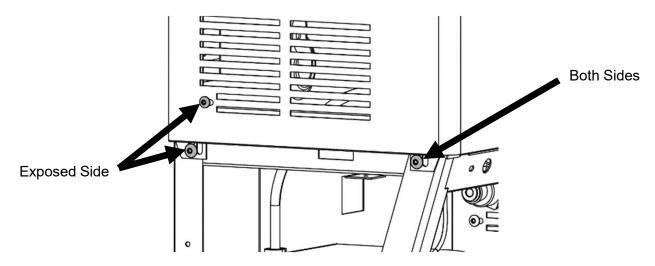

17. Install the provided long drainpipes to the elbow fittings of each unit. Next, install the Elkay drainpipes to connect the drains and then connect to the P-Trap. Cut provided pipes as needed.

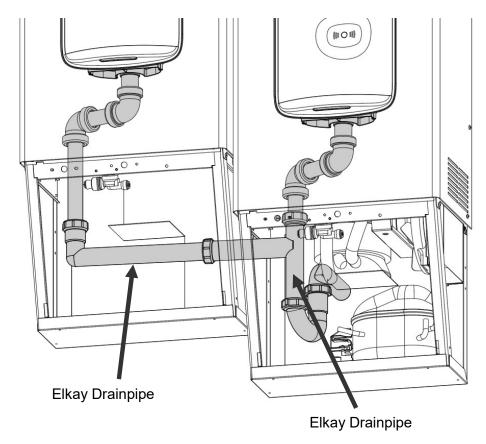

- 18. Connect the provided ¼" union fittings to the water-out lines of each fountain (see **page 26**). Connect the provided ¼" water lines and sponge tubing from each kit to the fountain water out lines and install into the solenoid located on top of the alcove. Reference **page 19**.
- 19. NNFEBFEZ with VersaFilter III on the dummy unit: Remove 1/4"OD water source line from refrigerated unit (see **page 9**). See **page 15** for flushing the filter, connecting the filter head inlet line and the outlet line to the refrigerated unit.
- 20. Turn on the water supply and check for leaks.
- 21. Plug in the power cords for the refrigerated unit and the cord for the NNEBFEZ or Filtered NNFEBFEZ units. DO NOT plug in the dummy unit power cord. Check for any malfunctions.
- 22. Reinstall the NNEBFEZ or the NNFEBFEZ top panel and fountain wrappers with the appropriate screws.
- 23. The NNEBEFEZ and the NNFEBFEZ comes pre-programmed from the factory. For programming options, please refer to **page 35.**

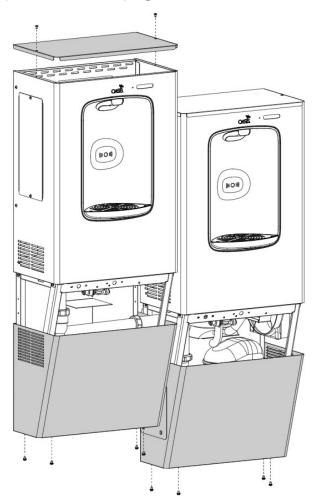

## Section 6: Set-Up Guide For OASIS® Hands-Free Bottle Filler Electronics

#### Factory default program settings are:

- a. Units Gallons
- b. Unfiltered unit
- c. Flow Rate = 1.0 GPMD
- d. Filter Capacity = 4750 gallons [18000 liters] for VersaFilter III
- e. Bottle Count = 0.5L (1 Bottle)
- f. 20 second maximum dispense time


**For each model** top cap will need to be set aside until programming is complete. Remove top cap by unscrewing two (2) T15 torx screws if needed. Remove wire tie bundling pushbutton inside bottle filler and feed it through hole in cooler top. You can then adjust program using pushbutton through access panel of cooler.

Pushbutton

#### To change the program settings, follow these steps:

<u>Display</u>	<u>Action</u>
000000000	Depress button for 3 seconds to enter into the following menu settings and make changes.
BOTTLES REUSED	Note: at anytime it will exit menu and save settings when idle for 10 seconds (no button press) and
(Home Screen)	revert back to Home Screen.
LTR/GAL	Depress button 3 seconds to change from Gallons to Liters,
GAL[LTR]	or momentary press to advance to next menu.
UNFILT/FILT?	Depress button 3 seconds to change from Unfiltered to Filtered unit,
UNFILTERED UNIT	or momentary press to advance to next menu.
[FILTERED UNIT]	
SELECT RATE	To change flow rate, momentarily depress button to change whole gallon digit.
1.0 GPMD UNIT	Hold button 3 seconds to advance to TENTHS of gallon digit.
[3.8 LPM UNIT]	Depress momentarily to change the digit.
	Hold button 3 seconds to advance to the next menu.
RESET 00000000	Depress button for 3 seconds to reset water usage count,
GALLON COUNT?	or momentary press to advance to next menu.
[LTR COUNT?]	
FILT CAPAC	Depress button for 3 seconds to change filter capacity to 1250 GAL [5000 LTR] for VersaFilter I.
OF 4750 GAL	Depress button for 3 seconds to change filter capacity to 3000 GAL [11000 LTR] for VersaFilter II.
[18000 LTR]	Depress button for 3 seconds to change filter capacity to 4750 GAL [18000 LTR] for VersaFilter III.
	or momentary press to advance to next menu.
3 sec rule ?	Depress button for 3 seconds to switch from 3 sec rule to 0.5L bottle,
3 sec	or momentary press to advance to next menu.
[0.5L]	(The 3 sec rule increases the bottle count by 1 if the water is dispensed for 3 sec or more.)
RESET 00000000	Depress button for 3 seconds to reset BOTTLES REUSED count to zero (Home Screen),
BOT COUNT?	or momentary press to advance to next menu.
Bot Filler	Depress button for 3 seconds to change maximum dispense time to 10, 20 or 30 seconds,
Set time: 20 s	or momentary press to advance to next menu.

### Section 5: Parts Breakdown

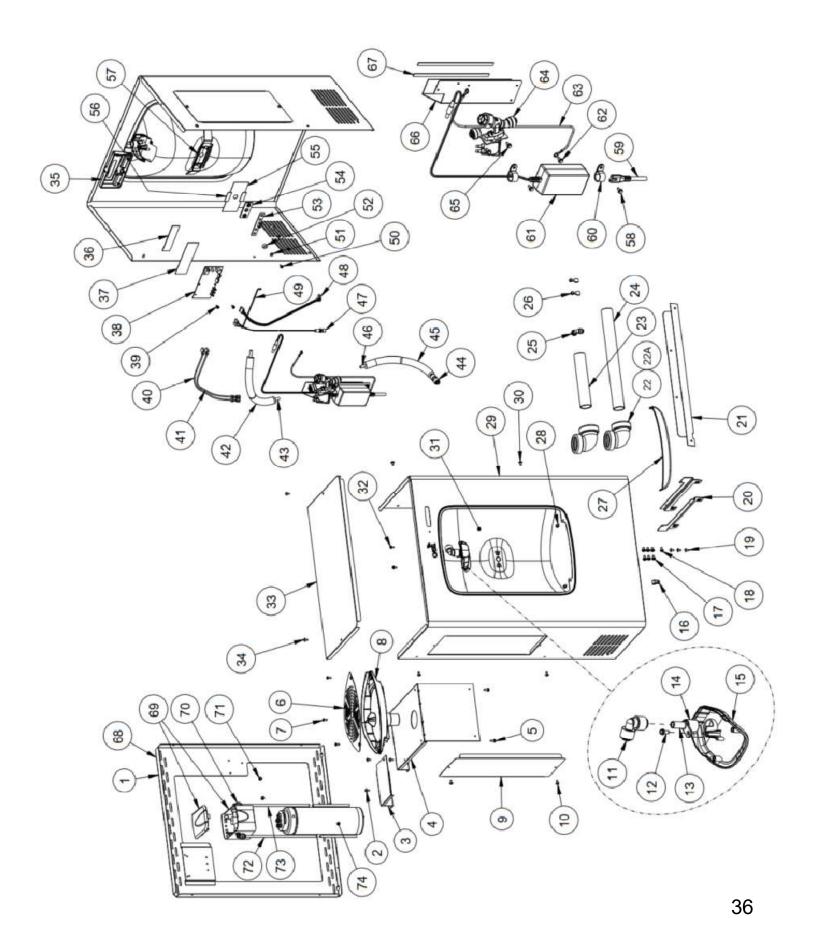

### Section 5: Parts Breakdown

<u>ITEM</u>	QTY	P/N	<u>Description</u>	ITEM	QTY	P/N	<u>Description</u>
1	1	041245-003	FRAME	34	2	031875-003	SCREW, TRUSS HD TAPPING TORX
2	4	031875-003	SCREW, TRUSS HD TAPPING TORX	35	1	041405-002-SP	VHB PCB BRACKET ASSEMBLY
3	1	041246-001	BRACKET, ENN FILTER SUPPORT	36	1	042575-001	LENS, LCD
4	1	041244-003	BRACKET, ENN DRAIN ARF	37	1	038915-103	MYLAR A POLYESTER FILM 1.50" X 4.25"
5	2	026642-006	SCREW, HEX HD TAPPING #8 X 1/2"	38	1	042064-002	PCB, MAIN
6	1	042374-001	GRILLE, DRIPTRAY	39	2	026630-004	SCREW, PAN HD TAPPING #6 X 3/8"
7	3	026675-003	SCREW, FLAT HD TAPPING #8 X 3/8"	40	1	021929-170	LEAD WIRE ASSY 12FR RED
8	1	042372-001	DRIPTRAY, SURFMOUNT	41	1	017340-166	LEAD WIRE ASSY 12FR BLACK
9	1	041241-001	PANEL, NN FILTER	42	1	017681-003-SP	INSULATION, SPONGE TUBE 9"
10	2	031875-003	SCREW, TRUSS HD TAPPING TORX	43	1	030152-102-SP	TUBE, PE WHITE 10"
11	1	029962-103	FITTING, PP REDUCING ELBOW	44	1	028605-101	FITTING, PP UNION 1/40D
12	1	026642-006	SCREW, HEX HD TAPPING #8 X 1/2"	45	1	017681-003-SP	INSULATION, SPONGE TUBE 9"
13	1	038029-001	ADAPTER, FLOW NOZZLE	46	1	030152-102-SP	TUBE, PE WHITE 10"
14	1	038032-001	FLOW NOZZLE ASSEMBLY	47	1	042067-001	BUTTON ASSEMBLY
15	1	042369-001	SPOUT	48	1	042066-001	5-PIN WIRE, IR SENSOR
16	1	018541	CLAMP, STRAIN RELIEF	49	1	042068-001	LED ASSEMBLY
17	6	026642-010	SCREW, HEX HD TAPPING #10 X 3/8"	50	2	026630-004	SCREW, PAN HD TAPPING #6 X 3/8"
18	1	026670-001	SCREW, HEX HD MACHINE #8 X 3/8"	51	2	016377-004	WASHER, METAL
19	3	031875-003	SCREW, TRUSS HD TAPPING TORX	52	2	028706-046	SPACER - NON METAL
20	2	041242-001	BRACKET, ENN SIDE	53	1	042065-001	PCB, IR SENSOR
21	1	021929-129	BRACKET, ENN CENTER	54	1	038027-001	LENS, IR BOTTLE FILLER
22	2	A020967	1-1/2" ELBOW, W/NUTS, 1-1/4"	55	1	038915-102	MYLAR A POLYESTER FILM 2.0" X 4.0"
22A	4	039043-001	WASHER, SLIP 1-1/2" TO 1-1/4"	56	2	038916-101	MYLAR POLYESTER TAPE, 1.25"LG
23	1	036010-002	TUBE, WASTE 6.13"	57	1	041405-003-SP	VHB IR BRACKET ASSEMBLY
24	1	036010-013	TUBE, WASTE 11.63"	58	2	026670-001	SCREW, HEX HD MACHINE #8 X 3/8"
25	1	028481-101	FITTING, PP UNION ELBOW 1/40D	59	1	041207-001-SP	POWER CORD ASSEMBLY
26	2	026923	TERMINAL .250 INSUL STR	60	2	032839-004	P-CLIP, 5/8"
27	1	042370-001	COVER, FRONT	61	1	038036-003	POWER SUPPLY, 100-240VAC/12VDC
28	2	026642-006	SCREW, HEX HD TAPPING #8 X 1/2"	62	1	026670-001	SCREW, HEX HD MACHINE #8 X 3/8"
29	1	041238-005	WRAPPER, ENN OASIS	63	1	021339-177	LEAD WIRE ASSY 16GG
30	4	031875-003	SCREW, TRUSS HD TAPPING TORX	64	1	038030-002	SOLENOID VALVE 12VDC
31	1	041405-001-SP	VHB ALCOVE ASSEMBLY	65	2	026670-001	SCREW, HEX HD MACHINE #8 X 3/8"
32	2	026642-003	SCREW, HEX HD TAPPING #8 X 3/8"	66	1	042576-002	BRACKET, MWEBF ELECTRONICS
33	1	041239-001	PANEL, ENN TOP	67	2	041370-002	TAPE, VHB 7"

NNFEBFEZ with VersaFilter III only							
68	1	041410-002	FILTER BRAKET FRAME ASSEMBLY				
69	1	041146-001	FILTER HEAD ASSEMBLY, SINGLE STAGE				
70	1	029994-103	FITTING, ELBOW PLUG IN				
71	2	026642-006	SCREW, HEX HD TAPPING #8 X 1/2"				
72	1	030152-046-SP	TUBE, PE WHITE 38"				
73	1	030152-031-SP	TUBE, PE WHITE 30"				
74	1	041145-001	FILTER CARTRIDGE, VERSAFLITER III				

#### OWNER'S COPY

#### 1 YEAR BOTTLE FILLER LIMITED WARRANTY

#### **FIRST YEAR**

The manufacturer promises the original purchaser (user) to repair, give credit for, or, at the manufacturer's option, to replace any part of this bottle filler which proves to be inoperative due to a defect in material or workmanship under normal use, for a period of one year from the date of original installation or for a period of eighteen (18) months after date of shipment from the factory, whichever occurs first. During the one year warranty, the Manufacturer will either replace, give credit for, or repair the bottle filler through its approved service center or factory repair department, and provide labor and parts necessary to correct such inoperative condition at no charge, if it has been installed and operated in accordance with the written instruction furnished with the bottle filler.

If it becomes necessary to ship the inoperative bottle filler to the approved service center or factory repair department, the Manufacturer will pay the transportation charges both ways via common carrier. Local delivery charges are not covered.

The cost of labor required to disconnect and reconnect plumbing and electrical connections will be the responsibility of the user (owner).

#### GENERAL PROVISIONS AND EXCLUSIONS:

This warranty applies only within the Continental Limits of the United States of America and Canada.

This warranty does not apply and no agreement, either expressed or implied, shall be applicable if the affixed serial number is removed, defaced or obliterated.

This warranty does not apply to any water components that become inoperative due to liming conditions.

This warranty does not apply to any bottle filler or components that become inoperable because of a failure to satisfy standards or regulations adopted by any government or agency thereof subsequent to the date of shipment from the factory.

This warranty does not cover performance, failure or damages of any parts resulting from external causes such as alterations, abuse, misuse, misapplication, corrosion of acts of God.

This warranty applies only to the bottle filler portion. It does not apply to the water cooler. Refer to the water cooler warranty for coverage.

#### WARNING

Alteration or modification of this machine may cause serious flooding and/or hazardous electrical shock or fire.

Except as set forth herein, the Manufacturer makes no other warranty, guarantee or agreement expressed, implied or statutory, including any implied warranty of merchantability or fitness for a particular purpose.

The foregoing is in lieu of all other agreements expressed, implied or statutory and all other obligations or liabilities of the Manufacturer. The Manufacturer does not assume or authorize any person to assume any obligations of liability in connection with this product. In no event will the Manufacturer be liable for special or consequential damages or for any delay in the performance of this agreement due to causes beyond their control.



OASIS International 222 East Campus View BLVD • Columbus, OH 43235 U.S.A.

> Phone: 1-800-950-3226 Email: www.oasiscoolers.com

Installation of the NNEBFEZ or NNFEBFEZ could void the original water fountain warranty.

## Model NNEBFEZ and NNFEBFEZ Chilled Bottle Filler Retrofit Kit for ELKAY EZ8 and LZ8 Water Coolers

#### **Installation Instructions**



P/N 030099-703 Date: 01/2023 © 2023 LVD Acquisition, LLC

Oasis, Aqua Pointe, Versacooler and VersaFiller are registered trademarks of LVD Acquisition, LLC dba Oasis International

The ELKAY trademark is registered and owned by Elkay Manufacturing Company. OASIS International is not affiliated with Elkay Manufacturing Company in any way. No OASIS International Products are associated or affiliated with, sponsored or endorsed by the Elkay Manufacturing Company.



OASIS INTERNATIONAL
222 East Campus View Blvd.
Columbus, OH 43235
614-861-1350
www.oasiscoolers.com