

Radii Cartridge Replacement



Supplies Required

- Security T15 Torx Bit
- Flathead Screwdriver / ¼" Nut Driver
- Crescent Wrench
- Tape
- Oasis Cartridge Part# 029967-005

Securing Push Button

To change the cartridge place tape over the front push button to hold in place.



Remove Bottom Plate

Remove all 4 Torx Security Screws with Security T15 Torx Bits
Lift Plate up, and Pull Plate Back



Accessing Cartridge

Remove both Screws using a Flathead
Screwdriver or ¼" Nut Driver, and Pull Cartridge
Housing Back



Leave the Spacer in Place




Remove Retaining Nut

Remove retaining nut with Crescent Wrench by turning counterclockwise (it is normal to have a small amount of standing water in the holder)




Remove Cartridge

Remove Cartridge by pinching tip and pulling from cartridge housing

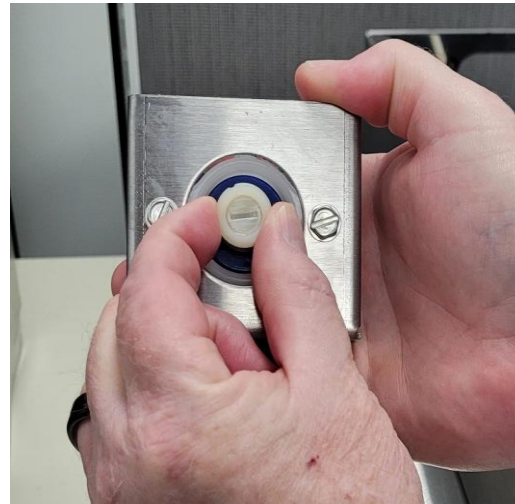

Inserting New Cartridge

Line holes up to fit properly and slide new cartridge into housing

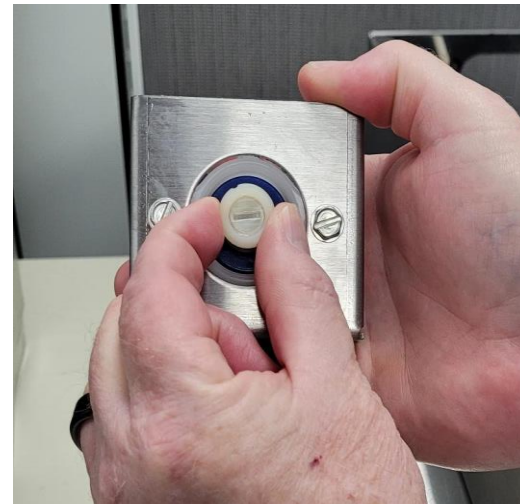

Adding Retaining Nut

Add retaining nut with Crescent Wrench by turning clockwise



Cartridge Installation

Put spacer in button cavity, push the cartridge back into position, and properly line holes. Screw back on with Flathead Screwdriver or ¼" Nut Driver



Re-Install Bottom Plate

Slide panel back into position, and add all 4 TorxSecurity Screws with Security T15 Torx Bit



Water Height Adjustment

To Adjust Bubbler Stream Height: The model is equipped with a Cartridge Regulator and has a hole in the center of the Pushbutton on the front of the unit. Insert a Flathead Screwdriver in this slot to adjust regulator. Turn adjustment clockwise to increase stream height.



Technical Support

Phone: 800.646.2747

Email: techserv@oasiscoolers.com

Web: www.oasiscoolers.com